

TC-K311

SERVICE MANUAL

*AEP Model
UK Model
Australian Model*



Model Name Using Similar Mechanism	TC-RX390
Tape Transport Mechanism Type	TCM-190VB12CS

SPECIFICATIONS

Recording system 4-track 2-channel stereo
Fast winding time Approx. 90 sec. (with Sony C-60 cassette)
Bias AC bias
Heads Erasing head × 1 (F&F head)
Playback/Recording head × 1 (SD head)
Motors Capstan motor × 1 (DC servo motor)
Reel motor × 1 (DC motor)

Signal-to-noise ratio (at peak level and weighted)

Cassette (Dolby NR off)	Type IV	Type II	Type I
	58 dB	57 dB	55 dB

Measured at peak level weighted without NR. The S/N is improved by about 15 dB at 500 Hz and by about 20 dB at 1 kHz with Dolby-C NR on, and by about 5 dB at 1 kHz and by about 10 dB at 5 kHz with Dolby-B NR on.

Harmonic distortion 0.4% (with Type I, 160 nWb/m, 315 Hz, 3rd H.D.)
1.8% (with Type IV, 250 nWb/m, 315 Hz, 3rd H.D.)

Frequency response (Dolby NR off)

Type IV cassette	30 - 15,000 Hz (±3 dB, IEC) 30 - 13,000 Hz [±3 dB (-4 dB recording)]
Type II cassette	30 - 15,000 Hz (±3 dB, IEC)
Type I cassette	30 - 14,000 Hz (±3 dB, IEC)

Type IV : Sony METAL-S or ES-IV
Type II : Sony UX-S or UX
Type I : Sony HF-S

Wow and flutter ± 0.13% W.Peak (IEC)
0.07% W.RMS (NAB)
± 0.18% W.Peak (DIN)

Inputs

Line inputs (phone jacks)	Sensitivity	0.16 V
	Input impedance	47 k ohms

Outputs

Line outputs (phone jacks)	Rated output level	0.5 V at a load impedance of 47 k ohms
	Load impedance	Over 10 k ohms
Headphones (stereo phone jack)	Output level	1 mW at a load impedance of 32 ohms

General

Power requirements AEP, Germany Model :
220 - 230 V AC, 50/60 Hz
UK, Australian Model :
240 V AC, 50/60 Hz
Power consumption 23 W
Dimensions Approx. 430 × 123 × 310 mm (w/h/d)
(17 × 4⁷/₈ × 12¹/₄ inches)
including projecting parts and controls
Mass Approx. 3.8 kg (8 lbs 6 oz)

Supplied accessories Audio connecting cords (2)

Design and specifications are subject to change without notice.

Note


This appliance conforms with EEC Directive 87/308/EEC regarding interference suppression.

STEREO CASSETTE DECK
SONY®

TABLE OF CONTENTS

<i>Section</i>	<i>Title</i>	<i>Page</i>	<i>Section</i>	<i>Title</i>	<i>Page</i>
	specifications	1	5. DIAGRAMS		
1. GENERAL			5-1. Block Diagram	11	
1-1. Identifying the Parts	3		5-2. Circuit Boards Location	14	
2. DISASSEMBLY			5-3. Printed Wiring Boards	15	
2-1. Front Panel	4		5-4. Schematic Diagram (SYSTEM CONTROL SECTION)	19	
2-2. Mechanism Deck	4		5-5. Schematic Diagram (AUDIO SECTION)	24	
2-3. Head	5		6. EXPLODED VIEWS		
2-4. Fitting Base Block	5		6-1. Chassis Section	27	
2-5. Motor	5		6-2. Front Panel Section	28	
3. EXPLANATION OF IC TERMINALS	6		6-3. Mechanism Section 1	29	
4. ADJUSTMENTS			6-4. Mechanism Section 2	30	
4-1. Mechanical Adjustments	8		7. ELECTRICAL PARTS LIST	31	
4-2. Electrical Adjustments	8				

MODEL IDENTIFICATION (Specification Label)

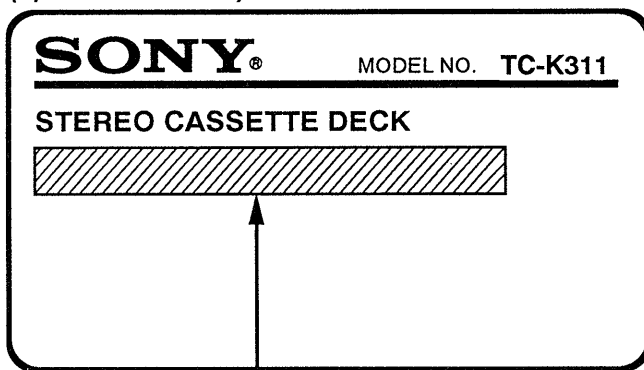

AEP, Germany model : AC 220-230V ~50/60Hz 23W
 UK, Australian model : AC 240V~50/60Hz 23W


SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK OR DOTTED LINE WITH MARK ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

SECTION 1 GENERAL

This section is extracted from instruction manual.

1-1. IDENTIFYING THE PARTS

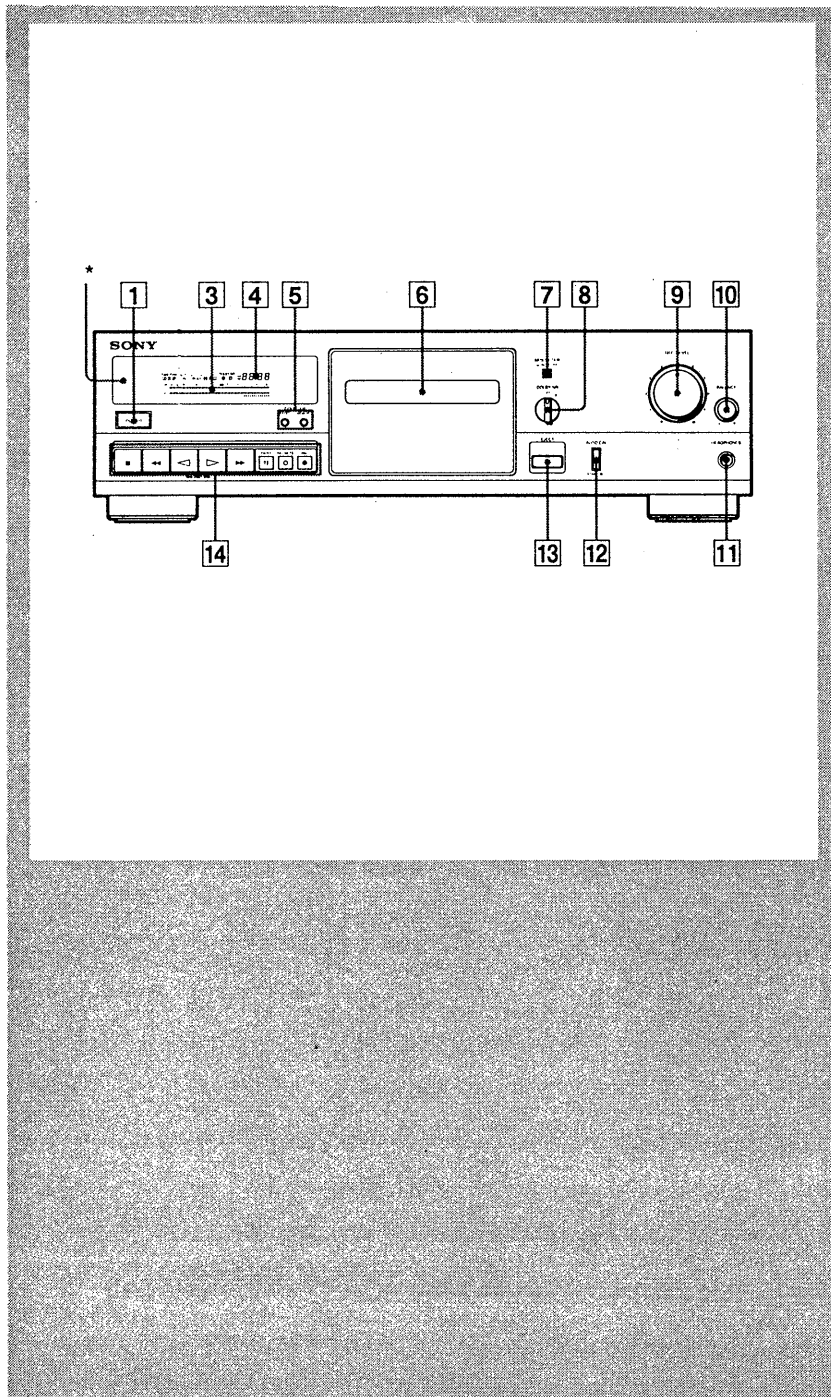



Front Panel

For details, refer to the page number(s) indicated in parentheses.

- 1 POWER switch
- 3 Peak level meter
- 4 Digital counter
- 5 COUNTER buttons
RESET button
MEMORY button
- 6 Cassette holder
- 7 MPX FILTER button
- 8 DOLBY NR (noise reduction) switch
- 9 REC (recording) LEVEL control
- 10 BALANCE control
- 11 HEADPHONES jack (stereo phone jack)
- 12 AUTO CAL button
- 13 ▲ (eject) button
- 14 Tape operation buttons
 - (stop) button
 - ◀◀ (leftward fast winding) (Multi-AMS**) button
 - ◀ (reverse play) button
 - ▶ (forward play) button
 - ▶▶ (rightward fast winding) (Multi-AMS**) button
 - || PAUSE button
 - REC MUTE (record muting) button
 - REC (recording) button

* Remote control sensor

You can remotely control this cassette deck with:

- A remote commander that came with a Sony amplifier or receiver if it has the  mark and cassette deck control capability.
- An optional Sony remote commander with the  mark and cassette deck control capability.

** AMS is an abbreviation for Automatic Music Sensor.


SECTION 2 DISASSEMBLY

Note : Follow the disassembly procedure in the numerical order given.

CASE


Unscrew the four case attachment screws M3 × 8 and remove the case.

2-1. FRONT PANEL

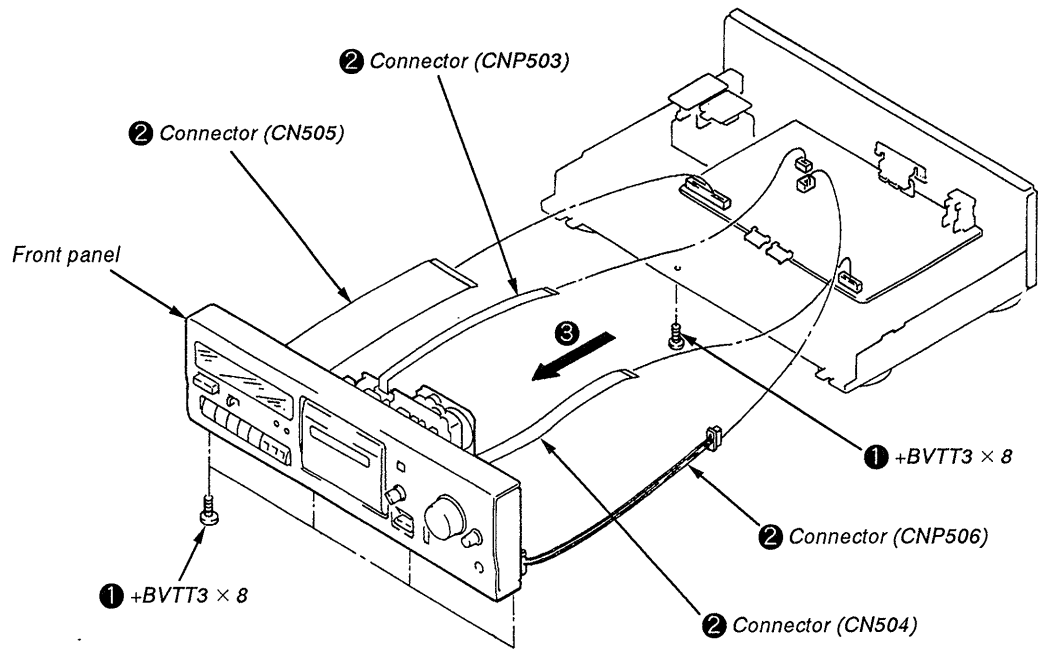


2-2 MECHANISM DECK


- ① Press the eject button.

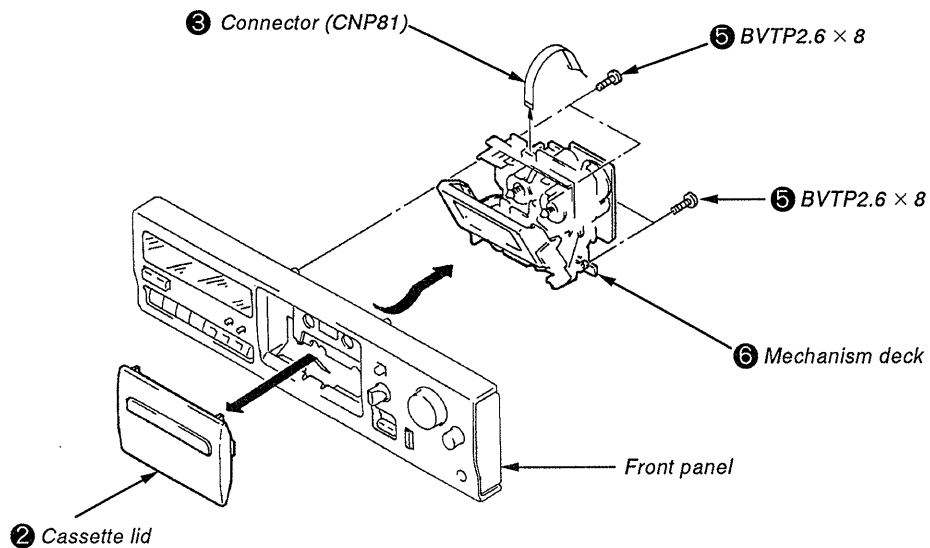


2-3. HEAD

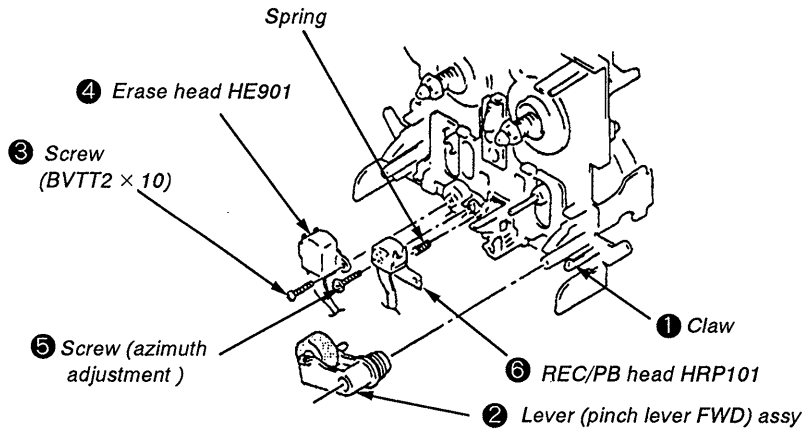

2-4. FITTING BASE BLOCK

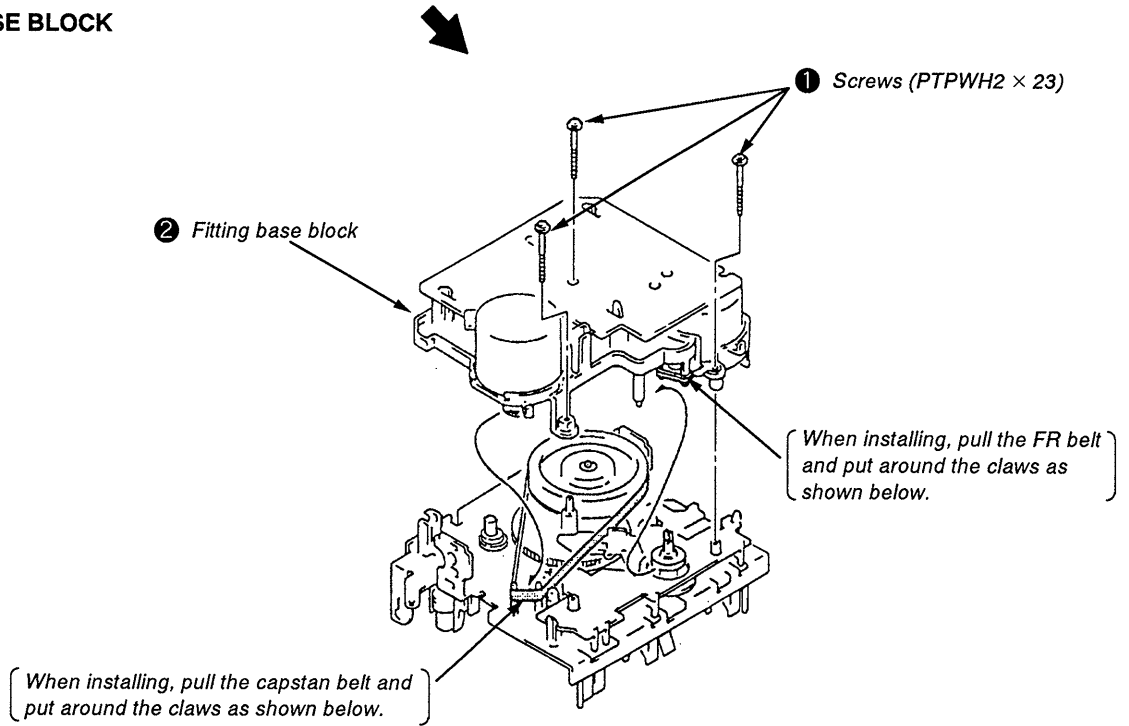

2-5. MOTOR

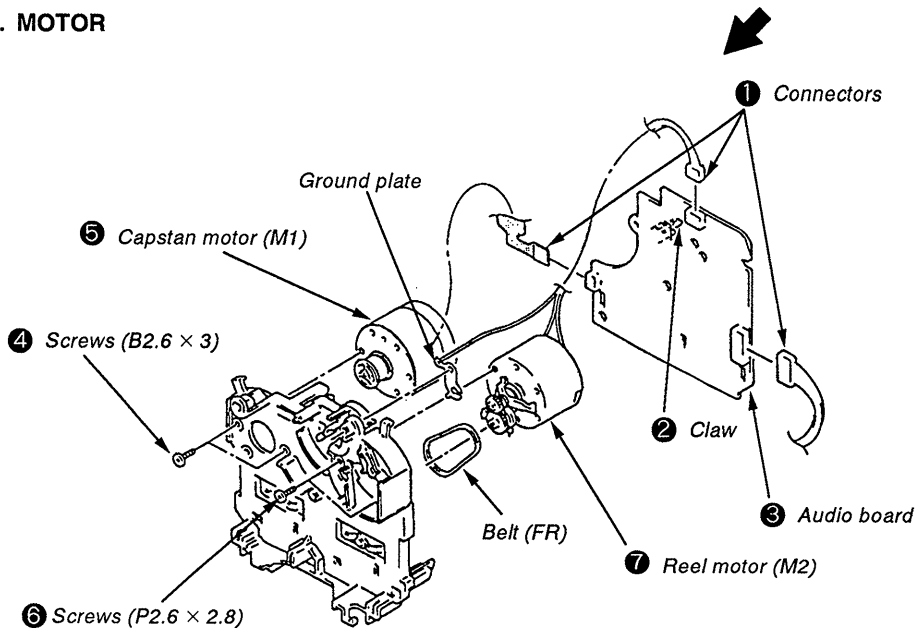

SECTION 3 EXPLANATION OF IC TERMINALS

IC801 CXP82316-014Q

Pin No.	Pin name	I/O	Description
1	STOP SW	I	Mechanism stop switch input terminal.
2	SIRCS	I	SIRCS signal in terminal.
3	NC	—	Not used.
4	—	—	
5	—	—	
6	MPX KEY	I	MPX Key ON/OFF switch input terminal. OFF = 0V
7	MPX ON/OFF	O	MPX Filter ON/OFF control terminal. OFF = L
8	CAL ON/OFF	O	Calibration ON/OFF control terminal.
9	REC CAL0	I	REC calibration terminal.
10	REC CAL1	I	REC calibration terminal.
11	GP CAL0	I	GP calibration terminal.
12	GP CAL1	I	GP calibration terminal.
13	—	—	
14	LINE MUTE	O	Line mute ON/OFF. 0V =Mute
15	REC/PB	O	Recording/Playback selector for dolby IC select.
16	REC MUTE	O	REC out mute terminal.
17	REEL -	O	Reel motor - control terminal.
18	REEL +	O	Reel motor + control terminal.
19	BIAS	O	Bias ON/OFF.
20	RELAY	O	Relay selector, terminal
21	CAL KEY	I	Calibration ON/OFF switch input terminal. ON = 0V
22	KEY X	I	Key switch input terminal.
23	KEY Y	I	Key switch input terminal.
24	METER L	I	Meter level Lch.
25	METER R	I	Meter level Rch.
26	DOLBY	I	Dolby OFF/B/C select terminal.
27	HALF	I	Half pawl input terminal.
28	AMS	I	AMS signal input terminal.
29	S • REEL	I	Suplly pulse input terminal.
30	RESET	I	Reset terminal. Reset = 0V
31	XO	O	System clock input terminal.
32	XI	I	System clock output terminal.
33	GND	—	Power supply (GND)
34	BIAS CAL0	O	Bias calibration terminal.
35	BIAS CAL1	O	Bias calibration terminal.
36	BIAS CAL2	O	Bias calibration terminal.
37	BIAS CAL3	O	Bias calibration terminal.
38	CAP • M ON/OFF	O	Capstan motor. ON/OFF control.
39	NC	—	Not used.
40	OSC ON/OFF	O	OSC ON/OFF control.

Pin No.	Pin name	I/O	Description
41	OSC H/ \bar{L}	O	OSC H/L control.
42	NC	–	Not used.
43	NC	–	Not used.
44	NC	–	Not used.
45	NC	–	Not used.
46	S1	O	FL Segment.
47	S2	O	FL Segment.
48	S3	O	FL Segment.
49	S4	O	FL Segment.
50	S5	O	FL Segment.
51	S6	O	FL Segment.
52	S7	O	FL Segment.
53	S8	O	FL Segment.
54	S9	O	FL Segment.
55	S10	O	FL Segment.
56	S11	O	FL Segment.
57	S12	O	FL Segment.
58	S13	O	FL Segment.
59	S14	O	FL Segment.
60	S15	O	FL Segment.
61	S16	O	FL Segment.
62	S18	O	FL Segment.
63	NC	–	Not used.
64	NC	–	Not used.
65	NC	–	Not used.
66	G5	O	FL Grid.
67	G4	O	FL Grid.
68	G3	O	FL Grid.
69	G2	O	FL Grid.
70	G1	O	FL Grid.
71	– 20V	–	– 20V.
72	+5V	–	Power supply (+5V)
73	+5V	–	Power supply (+5V)
74	METAL	I	Metal tape selector terminal. “H” : Metal
75	CrO ₂	I	CrO ₂ tape select terminal. “H” : CrO ₂
76	POWER IN	I	0V = Power OFF
77	POWER OUT	O	Power ON/OFF. ON = 0V
78	NC	–	Not used.
79	TEST	I	Test mode selector. 5V = Normal, 0V = Test mode
80	VER	I	Version selector. “H” : Reverse “L” : 1 way

SECTION 4 ADJUSTMENT

4-1. MECHANICAL ADJUSTMENTS

PRECAUTION

1. Clean the following parts with a denatured alcohol-moistened swab:

record/playback/erase head	pinch roller
rubber belts	capstan
idlers	
2. Demagnetize the record/playback head with a head demagnetizer. (Head demagnetizer do not approach for the erase head.)
3. Do not use a magnetized screwdriver for the adjustment.
4. After the adjustments, apply suitable locking compound to the parts adjusted.
5. The adjustments should be performed with the rated power supply voltage unless otherwise noted.

Torque Measurement


Torque	Torque	Meter reading
Forward	CQ-102C	30 to 65g•cm (0.42 to 0.9 oz•inch)
Forward back tension	CQ-102C	1 to 6g•cm (0.014 to 0.08 oz•inch)
FF/REW	CQ-201B	70 to 120g•cm (0.98 to 1.67 oz•inch)

4-2. ELECTRICAL ADJUSTMENTS

PRECAUTION

1. The adjustment should be performed in the publication. (Be sure to make playback adjustment at first.)
2. The adjustments and measurement should be performed for both L-CH and R-CH.
 - Switch position
DOLBY NR switch : OFF
 - Standard record position:
Deliver the standard input signal level to input jack and set the REC LEVEL control to obtain the standard output signal level as follows.

— Record Mode —

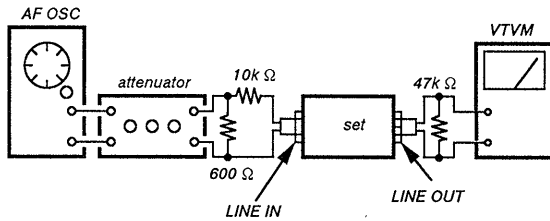

Standard Input Level

Input terminal	LINE IN
source impedance	10k Ω
input signal level	0.5V (- 3.8dB)

Standard Output Level

Output terminal	LINE OUT
load impedance	47k Ω
output signal level	0.5V (- 3.8dB)

Test Tape

Tape	Contents	Use
P-4-A100	10kHz, - 10dB	Azimuth Adjustment
P-4-L300	315Hz, 0dB	PB Level Adjustment
WS-48B	3kHz, 0dB	Tape Speed Adjustment

0dB=0.775V


Test Mode

1. Insert a short-circuit plug into TP801 (2P) and turn ON the power switch. (Earth pin Ⓣ of IC801 and turn ON the power switch.)
At first, all the fluorescent tubes light up, then the system returns to normal display. (However, "0000" is not displayed on the counter.)
2. To release the test mode, remove the short plug and turn off the power switch.
3. Remove the short plug after completion of adjustment.


Record/Playback Head Azimuth Adjustment

Procedure :


1. Forward playback Mode

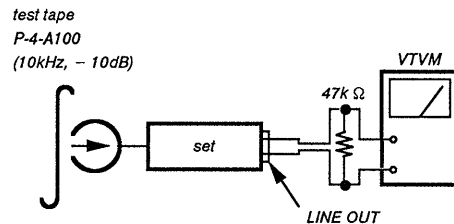

2. Turn the adjustment screw for the maximum output levels. If these levels do not match, turn the adjustment screw until both of output levels match together within 1dB.

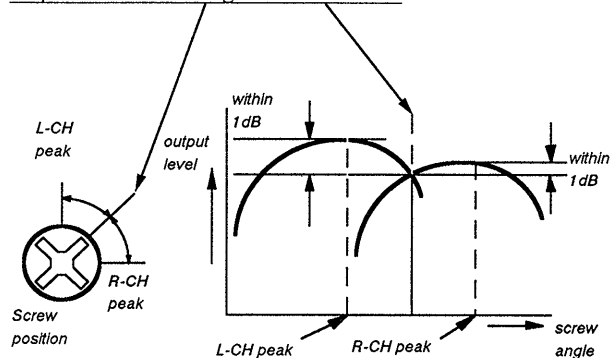


3. Playback Mode

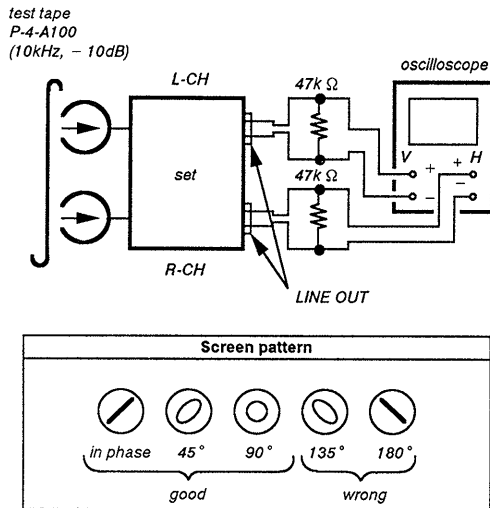

4. Change the reverse playback mode and repeat the steps 1 to 3.
5. After the adjustment, lock the adjustment screws with suitable locking compound.


Adjustment Location : – record/playback head –

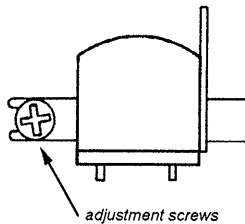

Tape Speed Adjustment

Procedure :

– Forward Playback Mode –

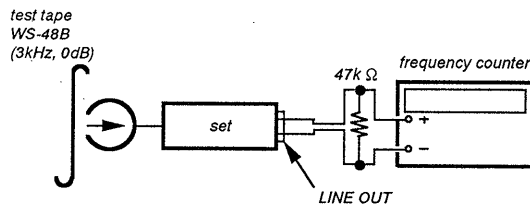

1. Set to FWD playback mode.
2. Adjust RV71 so that the frequency counter reading becomes $3,000 \pm 10\text{Hz}$.


Frequency difference between the beginning and the end of the tape should be within 3%.

Adjustment Location : AUDIO board

Playback Level Adjustment

Procedure :

– Forward Playback Mode –

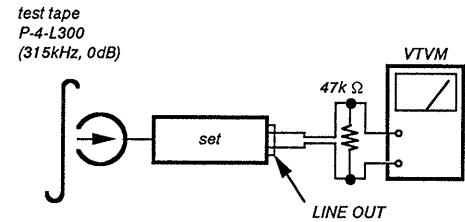

Adjust RV11(L-CH) and RV21(R-CH) so the VTVM reading becomes the adjustment limits below.

Adjustment Value :

LINE OUT level : $-7.7 \pm 0.5\text{dB}$ (0.301 to 0.338V)

Level difference between channels : within 0.5dB

Confirm the LINE OUT level does not change in playback mode while changing the mode from playback to stop several times


Adjustment Location : AUDIO board

Bias Consumption Current Adjustment

This adjustment should be performed when replacing the head assy or the bias oscillating transformer (T81,T91).

Procedure :

() : R-CH

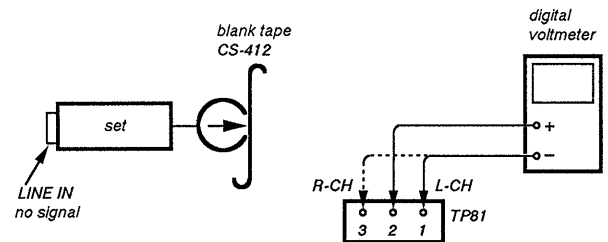

1. Connect the digital voltmeter to test point TP81.
2. Set RV81 (RV91) to mechanical center.
3. Set to FWD record mode.
4. Adjust T81 (T91) so that the digital voltmeter reading becomes minimum.


Adjustment Location : AUDIO board

Record Bias Adjustment


Setting :
 REC LEVEL control : standard record position (Refer to page 8.)

Procedure :

1. Record Mode

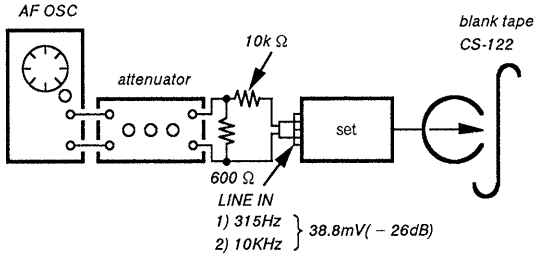

2. Playback Mode

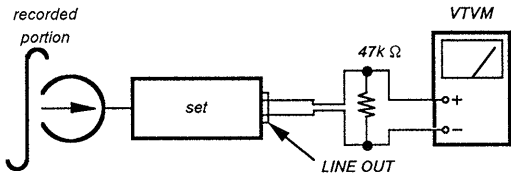

Confirm that the 10kHz playback output is $0 \pm 0.5\text{dB}$ relative to the 315Hz output. If necessary, adjust RV81(L-CH), RV91(R-CH) and repeat the steps given above.


Adjustment Location : AUDIO board

Record Level Adjustment


Setting :
 REC LEVEL control : standard record position (Refer to page 8.)

Procedure :

1. Record Mode

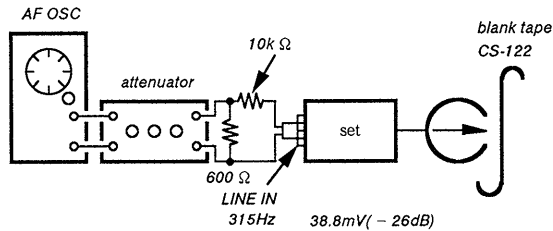

2. Playback Mode

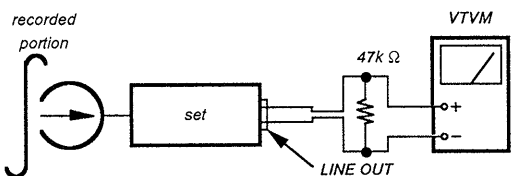

Confirm playback the tape recorded become adjustment level as follows.
 If necessary, adjust RV111(L-CH), RV211(R-CH) and repeat the steps 1 and 2.



Adjustment Value :

LINE OUT level : $-26 \pm 0.5\text{dB}$ (36.7 to 41.1mV)

Adjustment Location : SYSTEM CONTROL


– Adjustment Parts Location Diagrams –

【 SYSTEM CONTROL BOARD 】

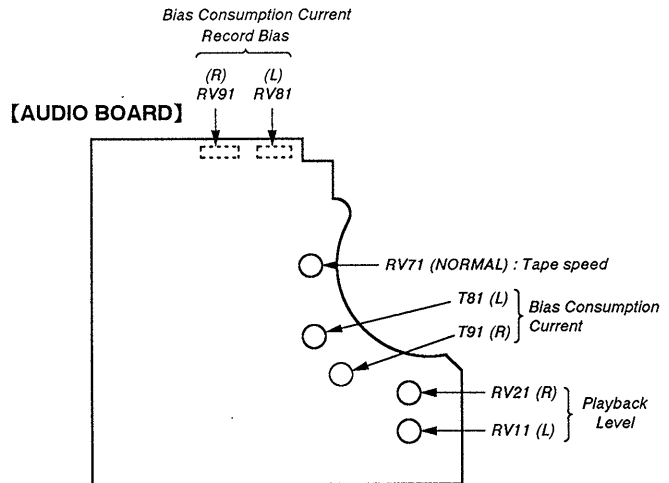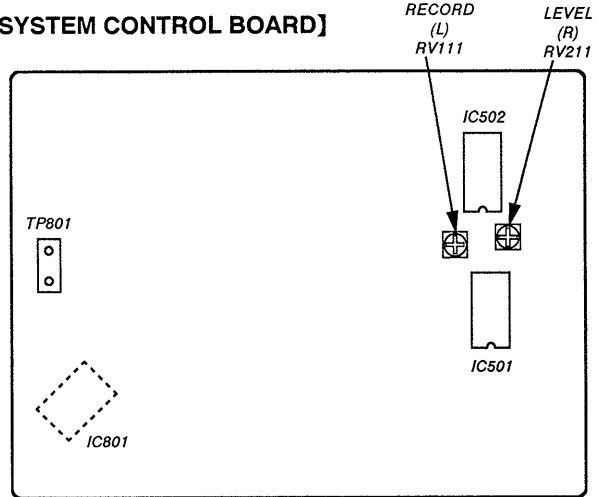


SECTION 5
DIAGRAMS

5-1. BLOCK DIAGRAM

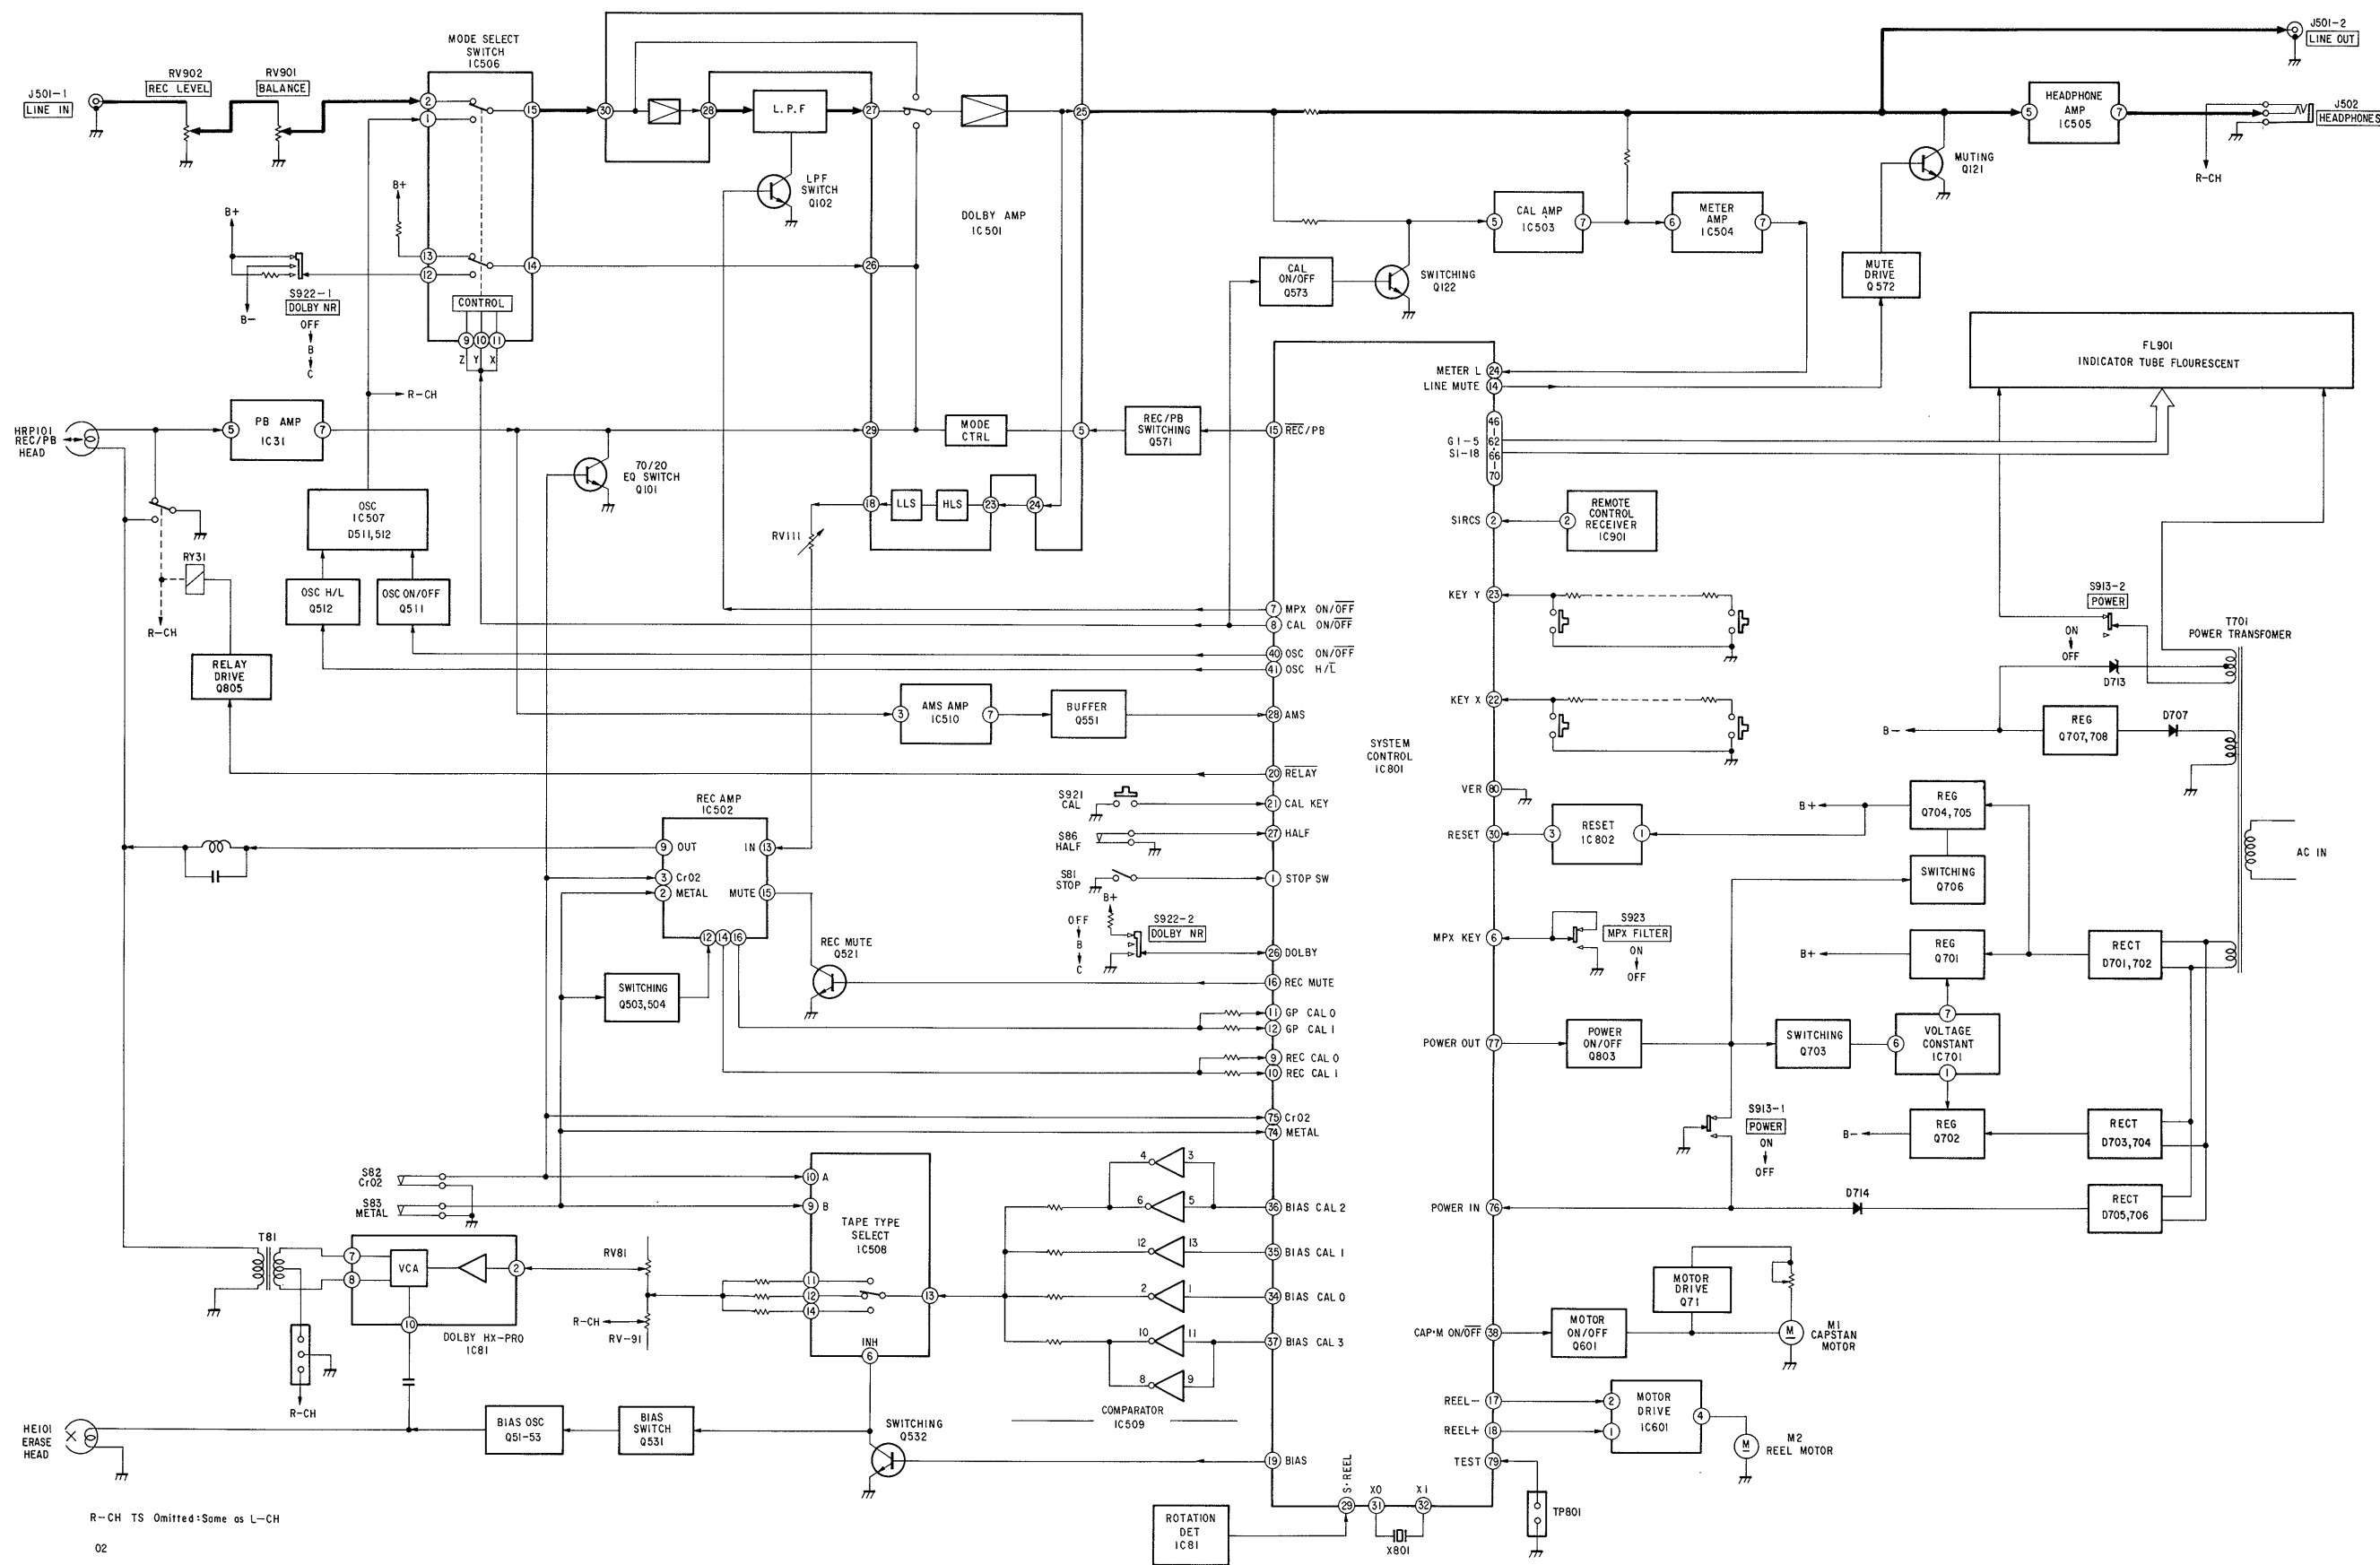

5-2. CIRCUIT BOARDS LOCATION

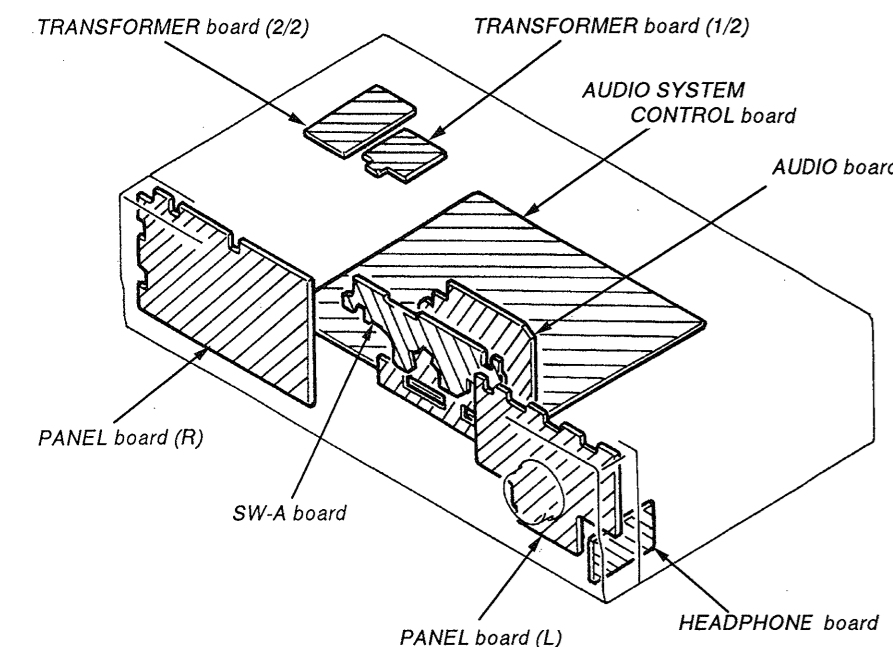


● SEMICONDUCTOR LOCATION

Ref. No.	Location	Ref. No.	Location
D31	H - 21	IC801	G - 15
D131	E - 13	IC701	B - 12
D132	F - 13	IC801	F - 16
D231	F - 13	IC802	E - 16
D232	F - 12	IC901	I - 2
D511	G - 11	Q51	G - 21
D512	G - 11	Q52	G - 21
D551	G - 13	Q52	G - 21
D571	D - 11	Q53	H - 21
D701	B - 15	Q71	H - 23
		Q101	H - 10
D702	B - 15	Q102	F - 10
D703	B - 15	Q121	C - 8
D704	B - 15	Q122	E - 10
D705	B - 15	Q201	H - 10
D706	C - 15	Q202	F - 8
D707	C - 16	Q221	C - 8
D708	B - 14	Q222	E - 10
D709	B - 12	Q503	B - 10
D710	B - 14	Q504	B - 10
D711	D - 15	Q511	G - 11
D712	C - 15	Q512	G - 11
D713	C - 16	Q521	C - 10
D714	D - 15	Q521	C - 10
D715	C - 13	Q531	G - 13
D801	E - 16	Q532	G - 13
		Q551	G - 13
D802	E - 16	Q571	D - 10
		Q572	D - 11
		Q573	E - 10
		Q601	G - 14
		Q701	A - 11
IC31	I - 21	Q702	A - 12
IC81	H - 22 (AUDIO)	Q703	B - 14
	H - 27 (SW-A)	Q704	A - 13
		Q705	B - 13
		Q706	B - 14
IC501	E - 9	Q707	C - 15
IC502	C - 9	Q708	C - 15
IC503	E - 11	Q803	G - 17
IC504	F - 13	Q805	D - 16
IC505	E - 13		
IC506	G - 9		
IC507	F - 11		
IC508	G - 14		
IC509	F - 14		
IC510	G - 12		


Note:

- : parts extracted from the component side.
- : parts mounted on the conductor side.
- : Through hole.
- ▨ : Pattern on the side which is seen.
- ▩ : Pattern of the rear side.
- : Chip components extracted from the rear side.


5-3. PRINTED WIRING BOARDS

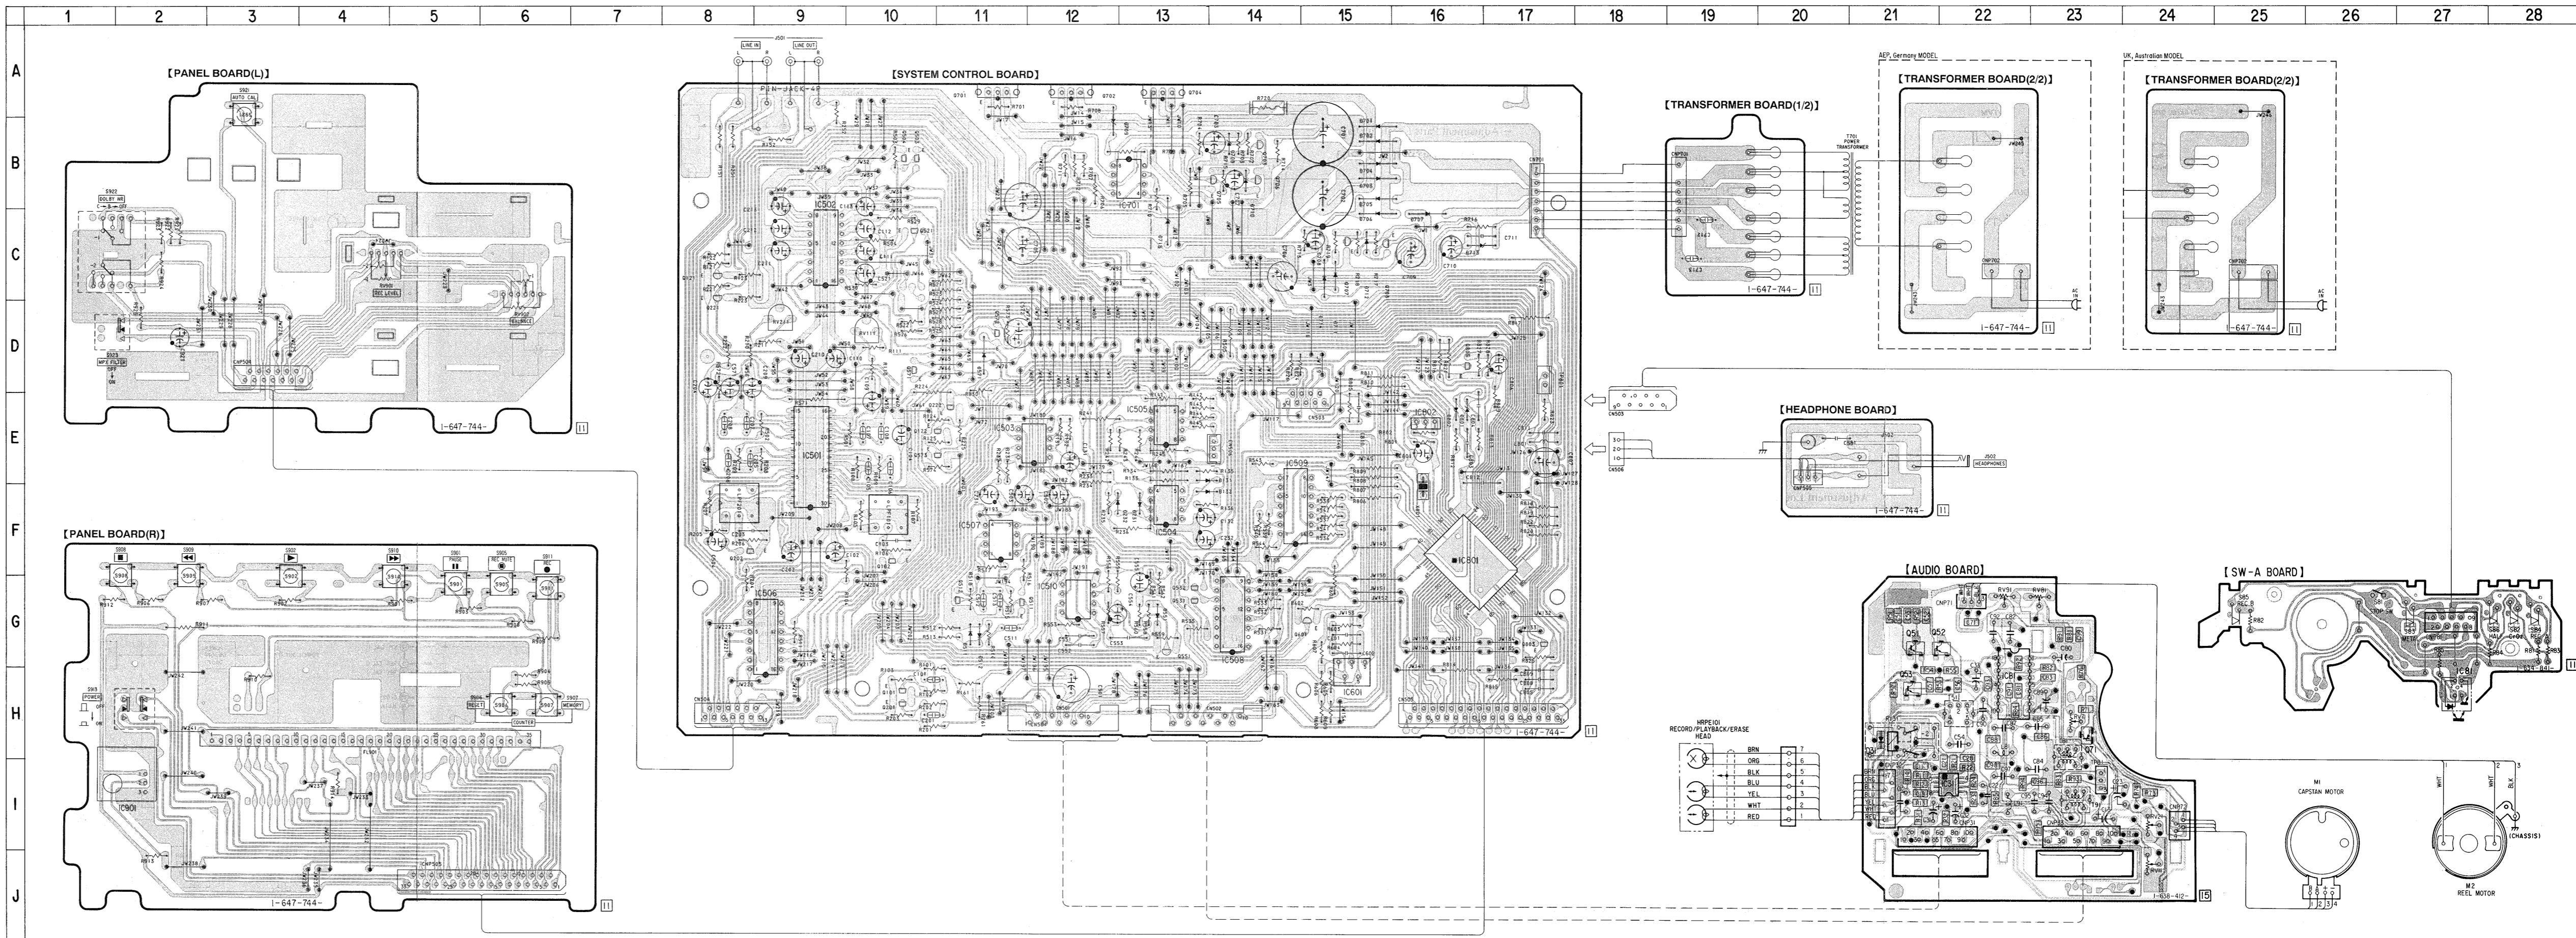

● Semiconductor Lead Layouts.

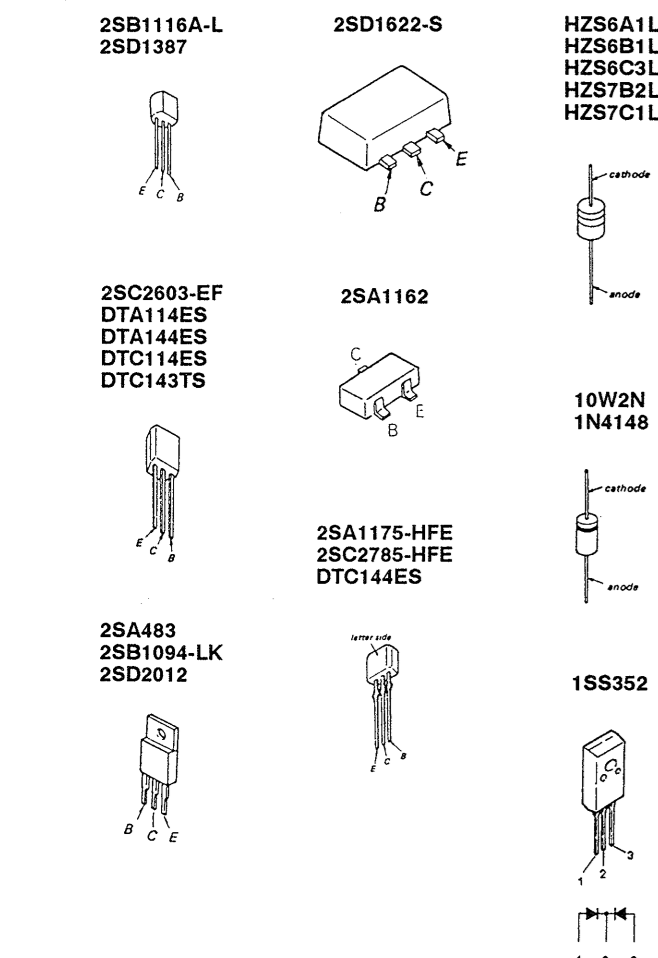

5-4. SCHEMATIC DIAGRAM (SYSTEM CONTRL SECTION) • Refer to page 25 for IC Block Diagrams. • Refer to page 26 for Waveforms.

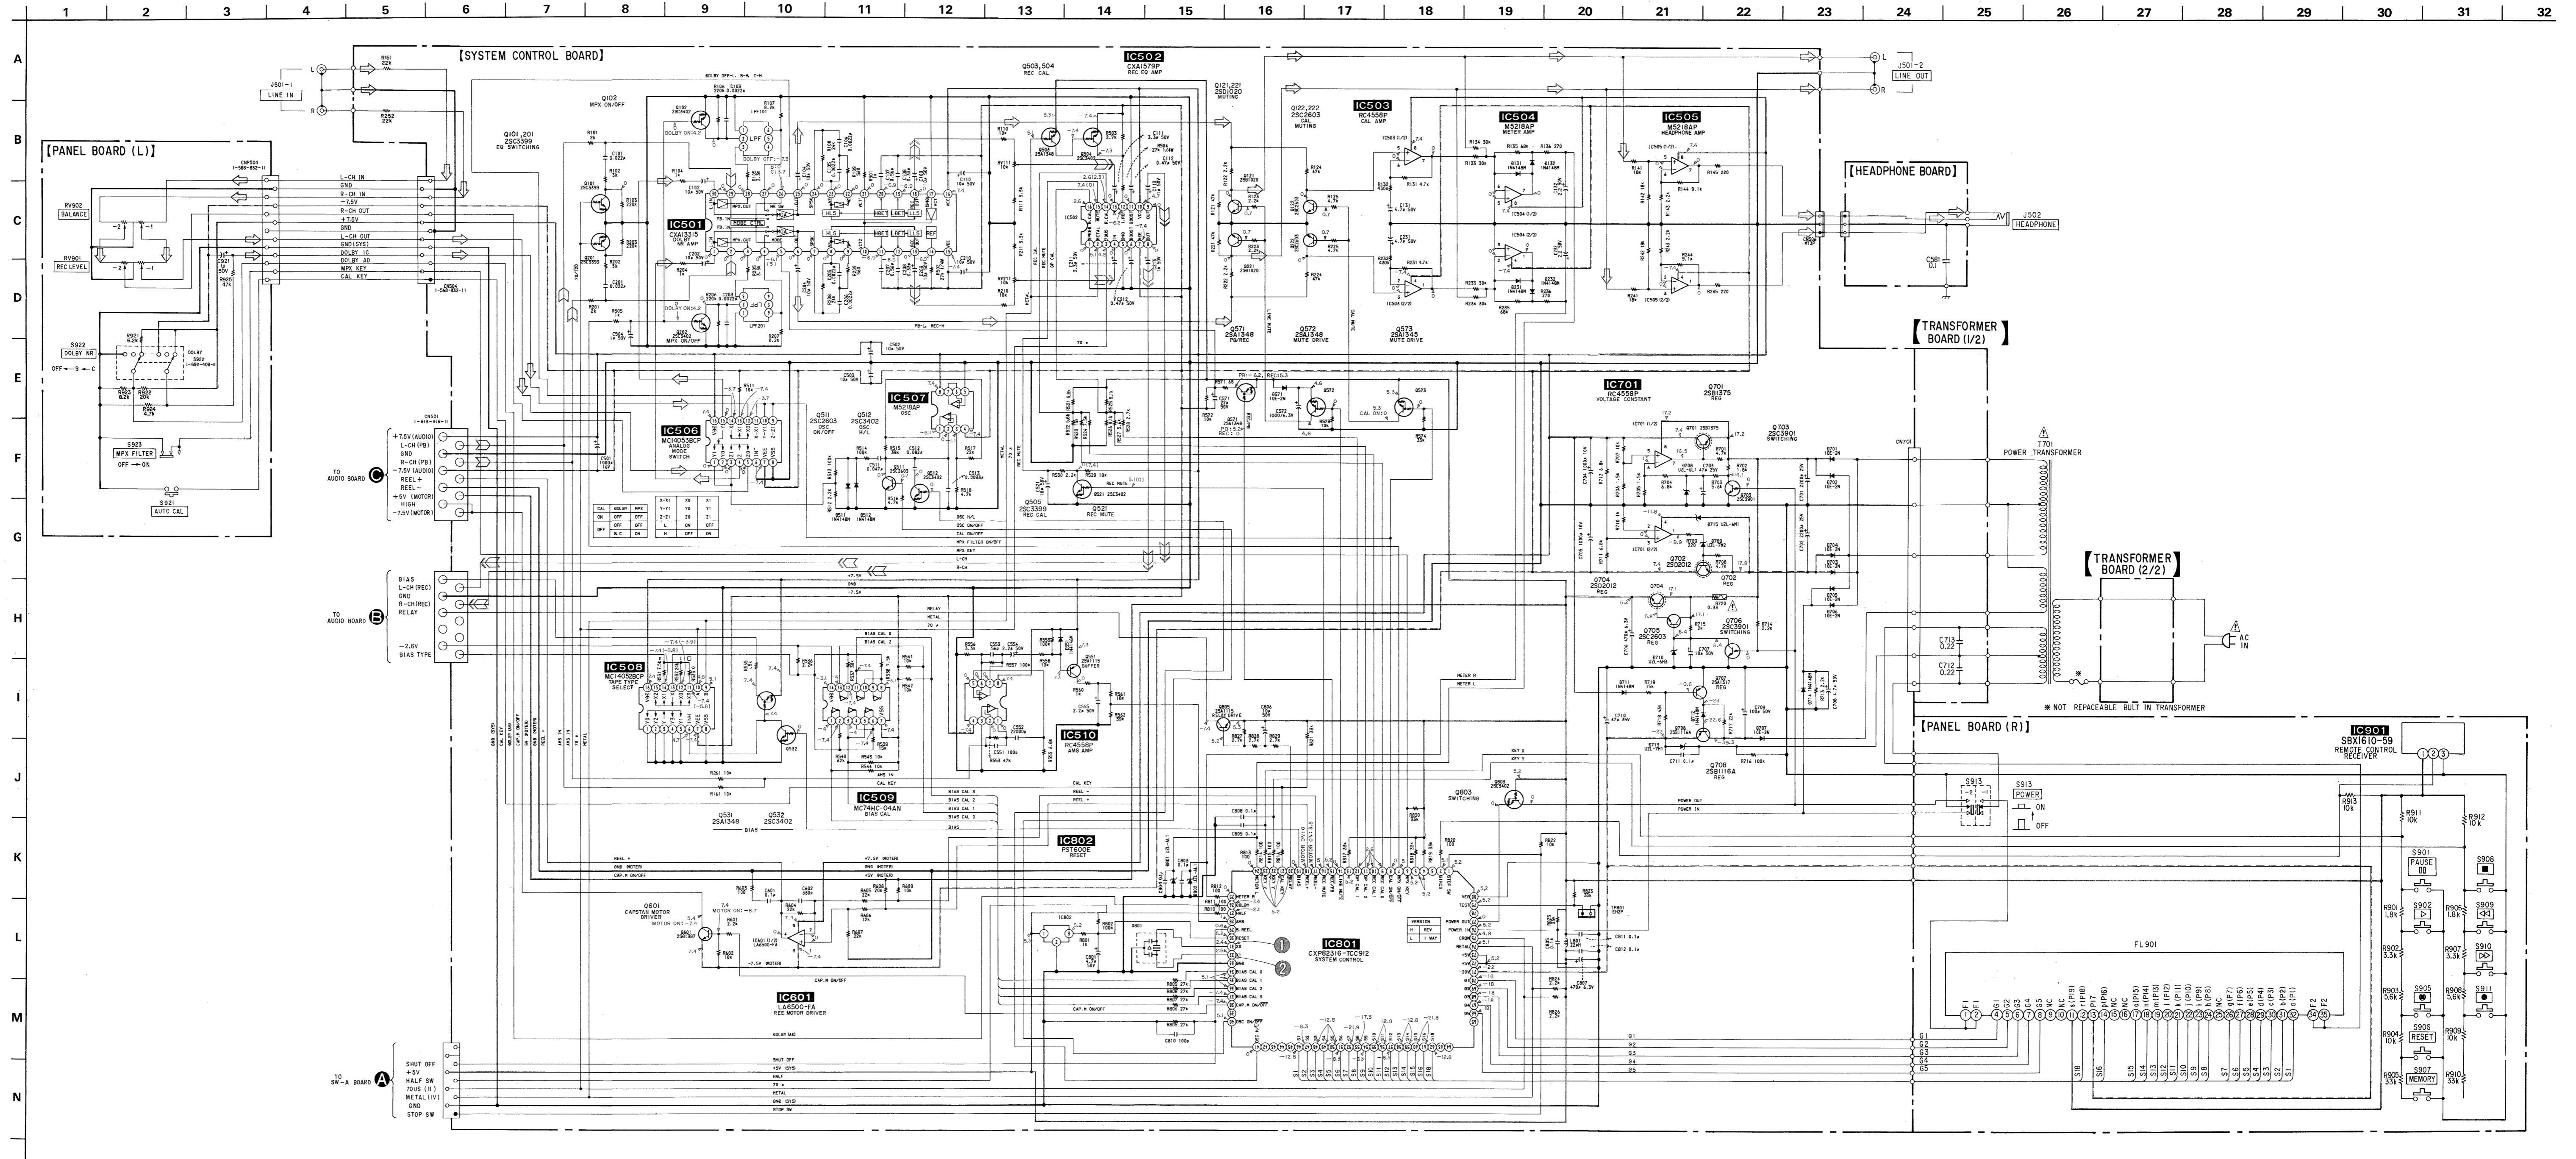


Note :

- All capacitors are in μF unless otherwise noted. pF: $\mu \mu F$ 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{2}W$ or less unless otherwise specified.
- % : indicates tolerance.
- Δ : internal component.
- \sim : fusible resistor.






Note : The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

- --- : B+ Line
- --- : B- Line
- --- : adjustment for repair.
- Voltage and waveforms are dc with respect to ground under no-signal conditions. no mark : STOP () : REC
- Voltages are taken with a VOM (input impedance 10M Ω) Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with an oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
- --- : PB
- --- : REC
- --- : LINE

Note :

- All capacitors are in μF unless otherwise noted. pF: μF 50VW or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}W$ or less unless otherwise specified.
- % : indicates tolerance.
- Δ : internal component.
-  : fusible resistor.


Note : The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

-  : B+ Line
-  : B- Line
-  : adjustment for repair.
- Voltage and waveforms are dc with respect to ground under no-signal conditions.
- no mark : STOP
- () : REC
- Voltages are taken with a VOM (Input impedance 10M Ω). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with an oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
-  : PB
-  : REC



5-5. SCHEMATIC DIAGRAM (AUDIO SECTION)

• IC Block Diagrams

IC502 CXA1578P

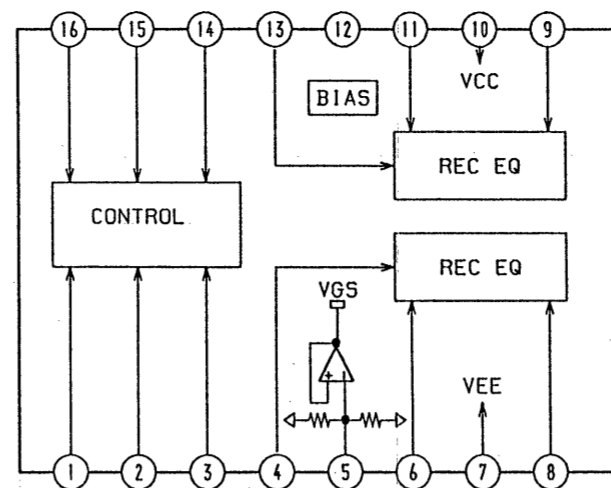

• WAVEFORMS

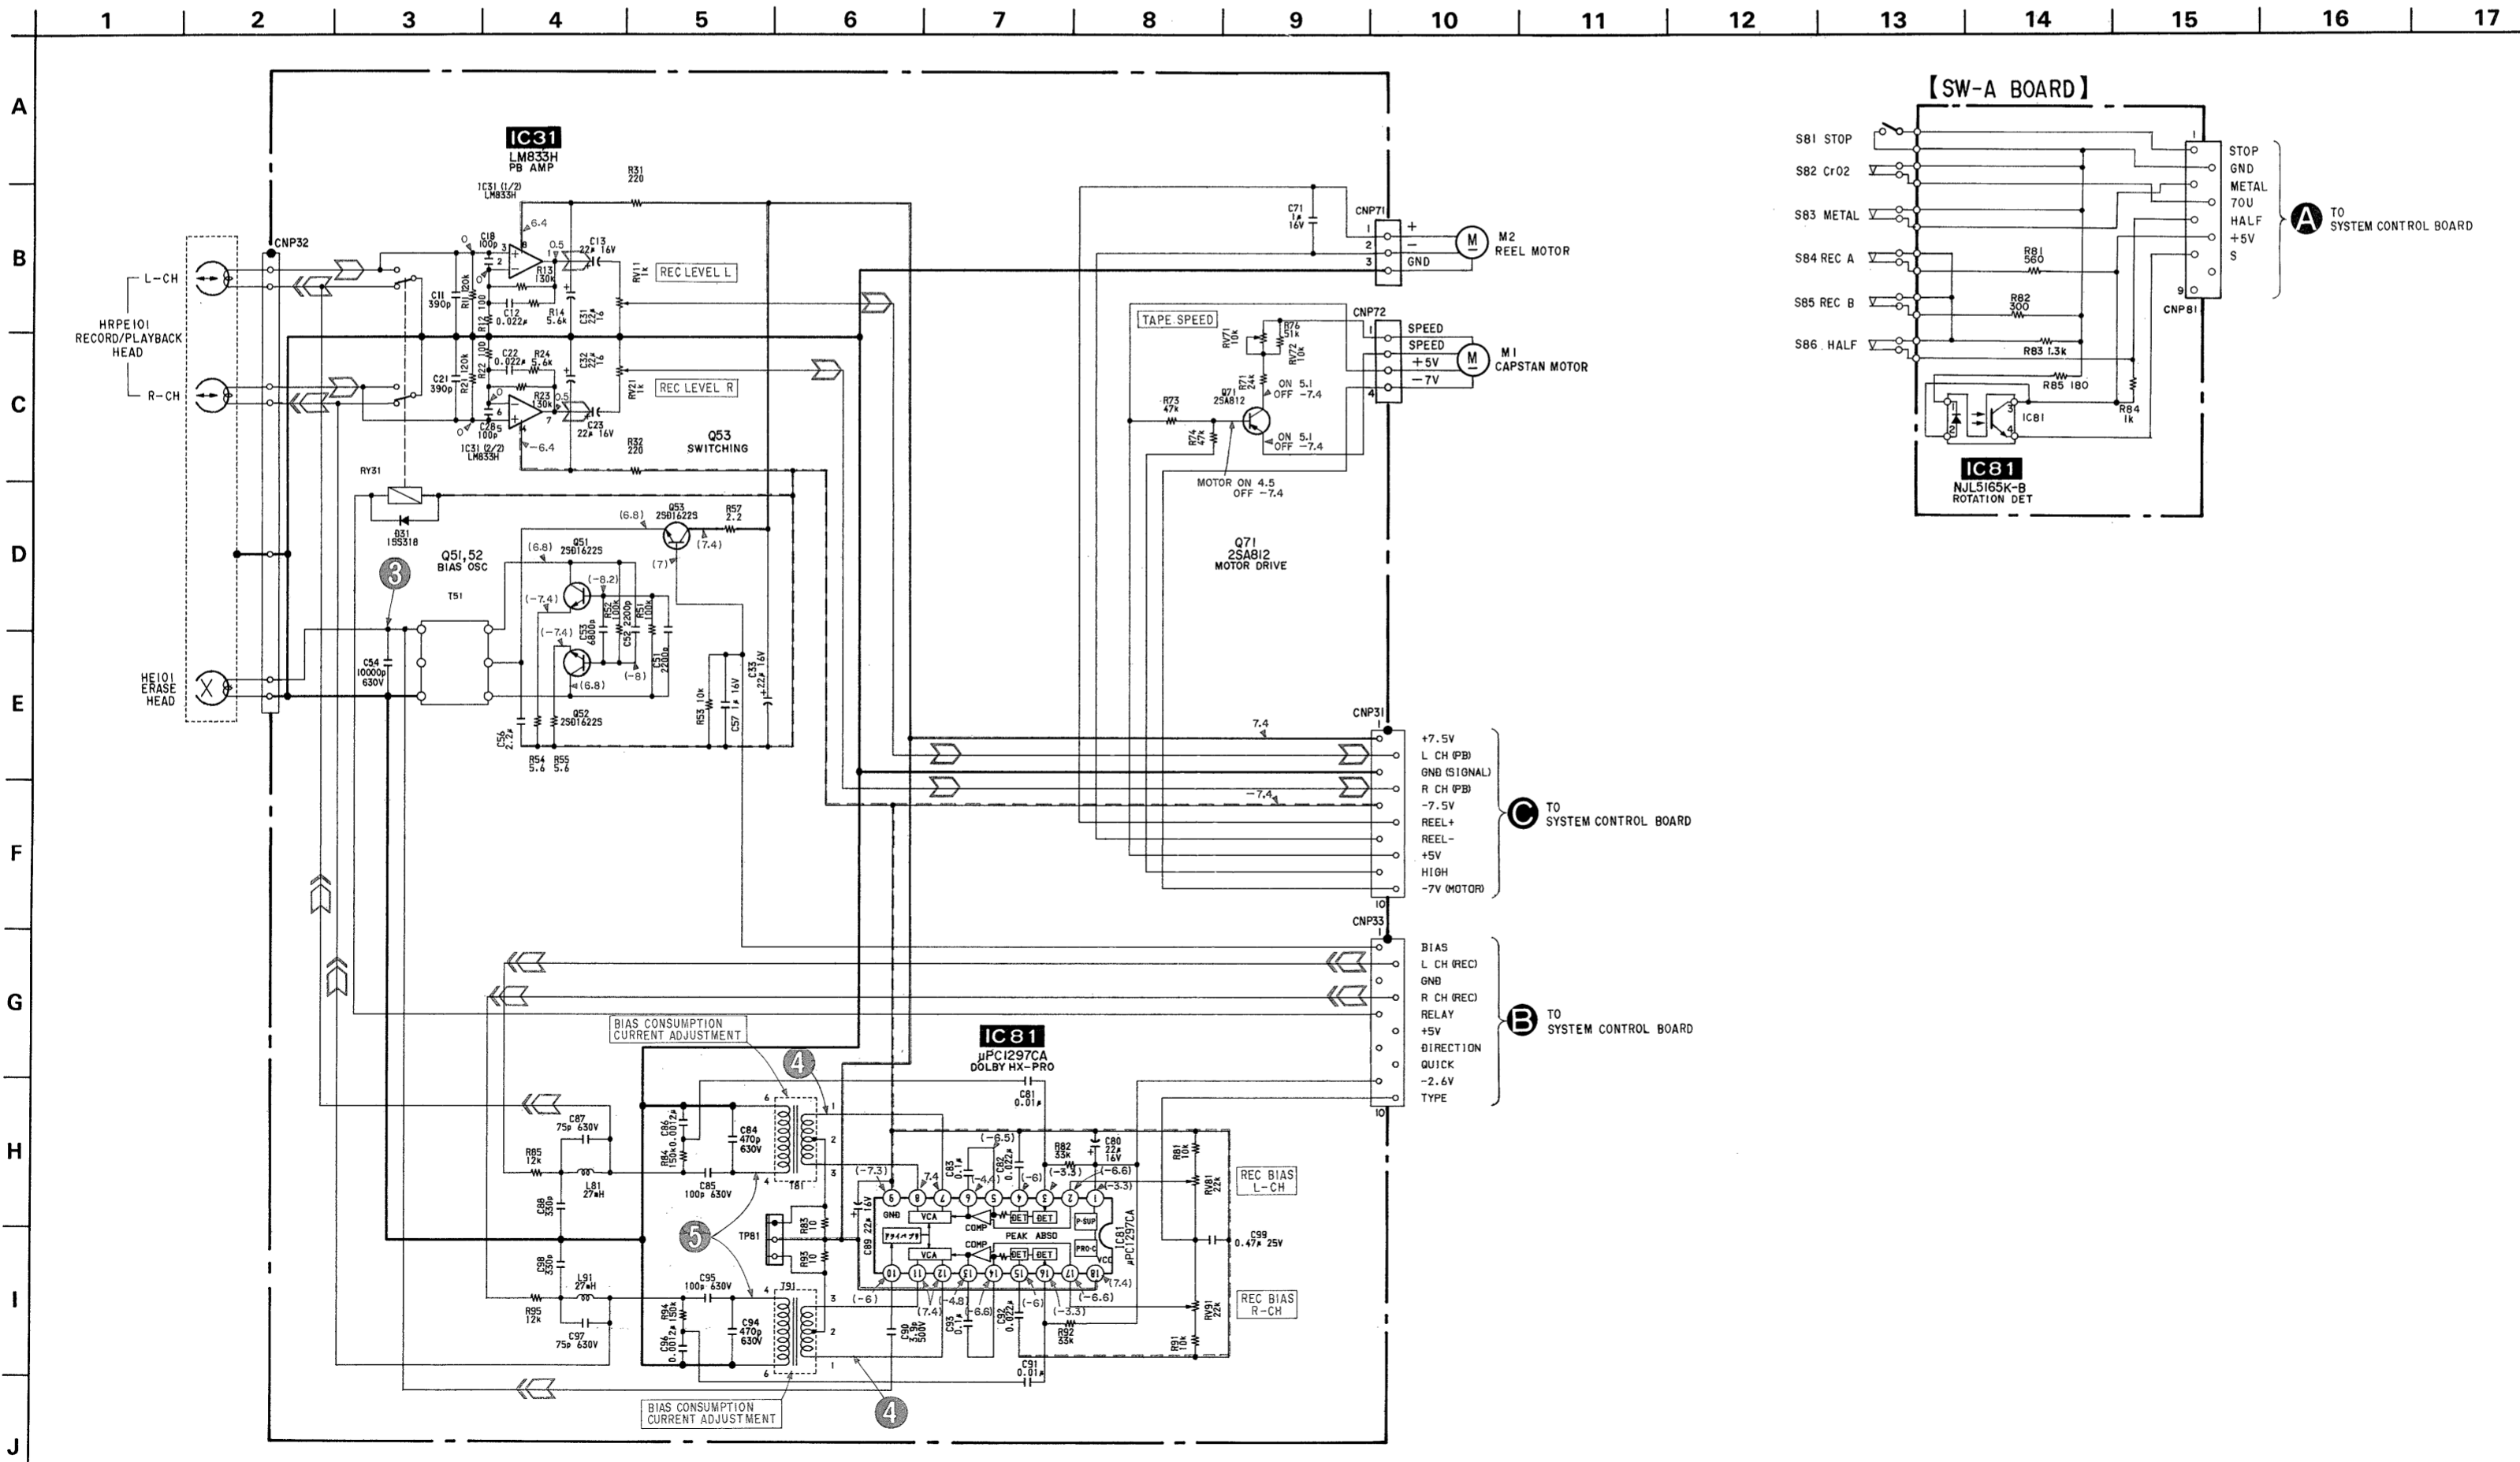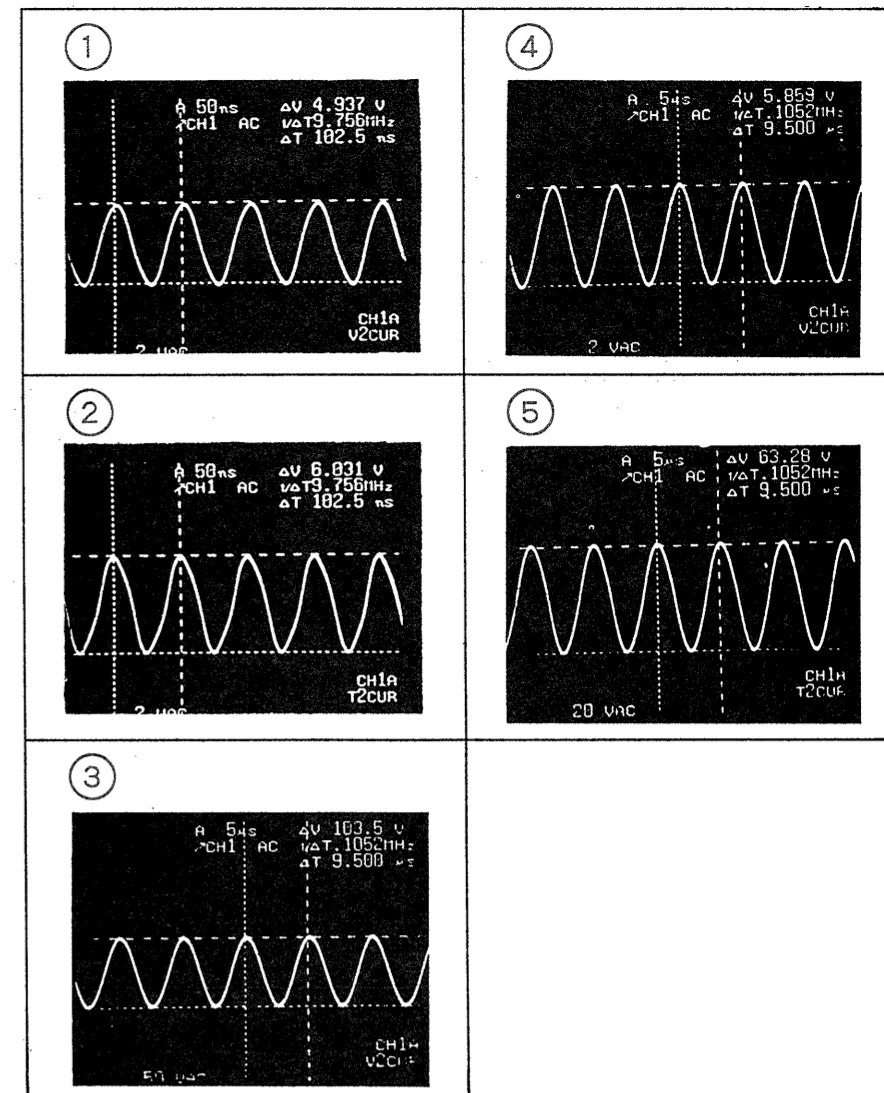

SECTION 6 EXPLODED VIEWS

NOTE :

- -XX, -X mean standardized parts, so they may have some difference from the original one.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Color indication of Appearance Parts
Example :
KNOB, BALANCE (WHITE)...(RED)


↑ Parts color ↑ Cabinet's color

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list is given in the last of this parts list.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

6-1. CHASSIS SECTION


- A : TRANSFORMER board (1/2)
- B : TRANSFORMER board (2/2)

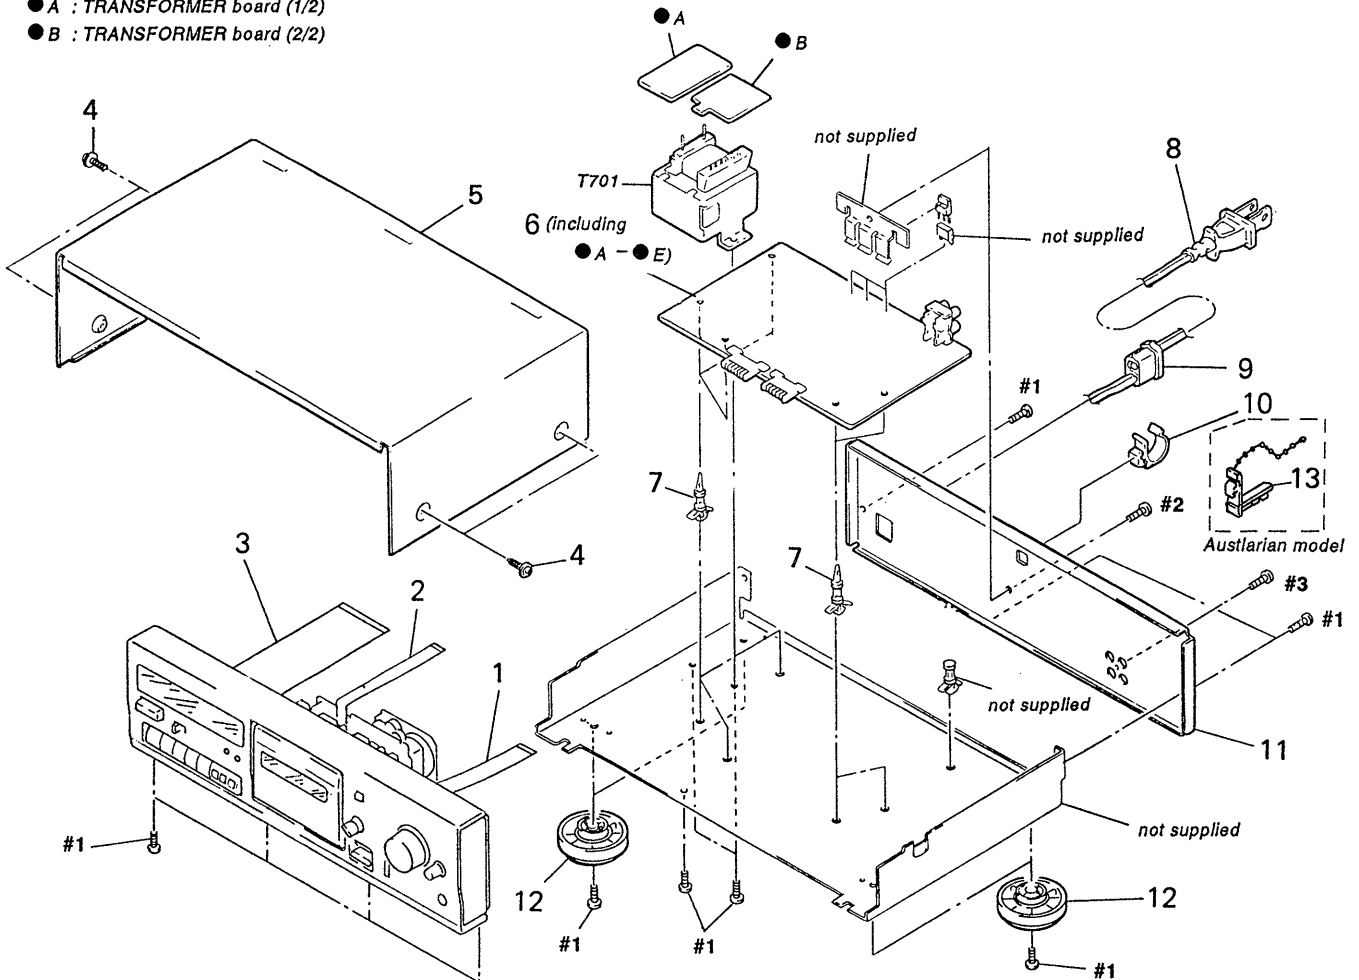

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	1-751-099-11	WIRE (FLAT TYPE) (13 CORE)		Δ 8	1-696-586-11	CORD, POWER (UK)	
2	1-575-781-11	WIRE, FLAT TYPE (9 CORE)		Δ 8	1-696-845-11	CORD, POWER (AUS)	
3	1-751-100-11	WIRE (FLAT TYPE) (33 CORE)		* 9	3-703-244-00	BUSHING (2104), CORD	
4	3-704-366-01	SCREW (CASE) (M3X8)		* 10	4-949-235-01	HOOK (AEP, Germany)	
5	3-332-578-61	CASE		* 11	3-387-836-01	PANEL, BACK (UK, AUS)	
* 6	A-2007-011-A	SYSTEM CONTROL BOARD, COMPLETE (AEP, Germany)		* 11	3-387-836-11	PANEL, BACK (AEP, Germany)	
* 6	A-2007-054-A	SYSTEM CONTROL BOARD, COMPLETE (UK, AUS)		12	4-956-885-11	FOOT (F58175S2W)	
* 7	3-346-265-11	HOLDER, PC BOARD		13	4-956-370-02	BAND, PLUG FIXED (UK, AUS)	
Δ 8	1-575-651-21	CORD, POWER (AEP, Germany)		Δ T701	1-423-634-11	TRANSFORMER, POWER	


6-2. FRONT PANEL SECTION

- C : PANEL board (R)
- D : PANEL board (L)
- E : HEADPHONE board

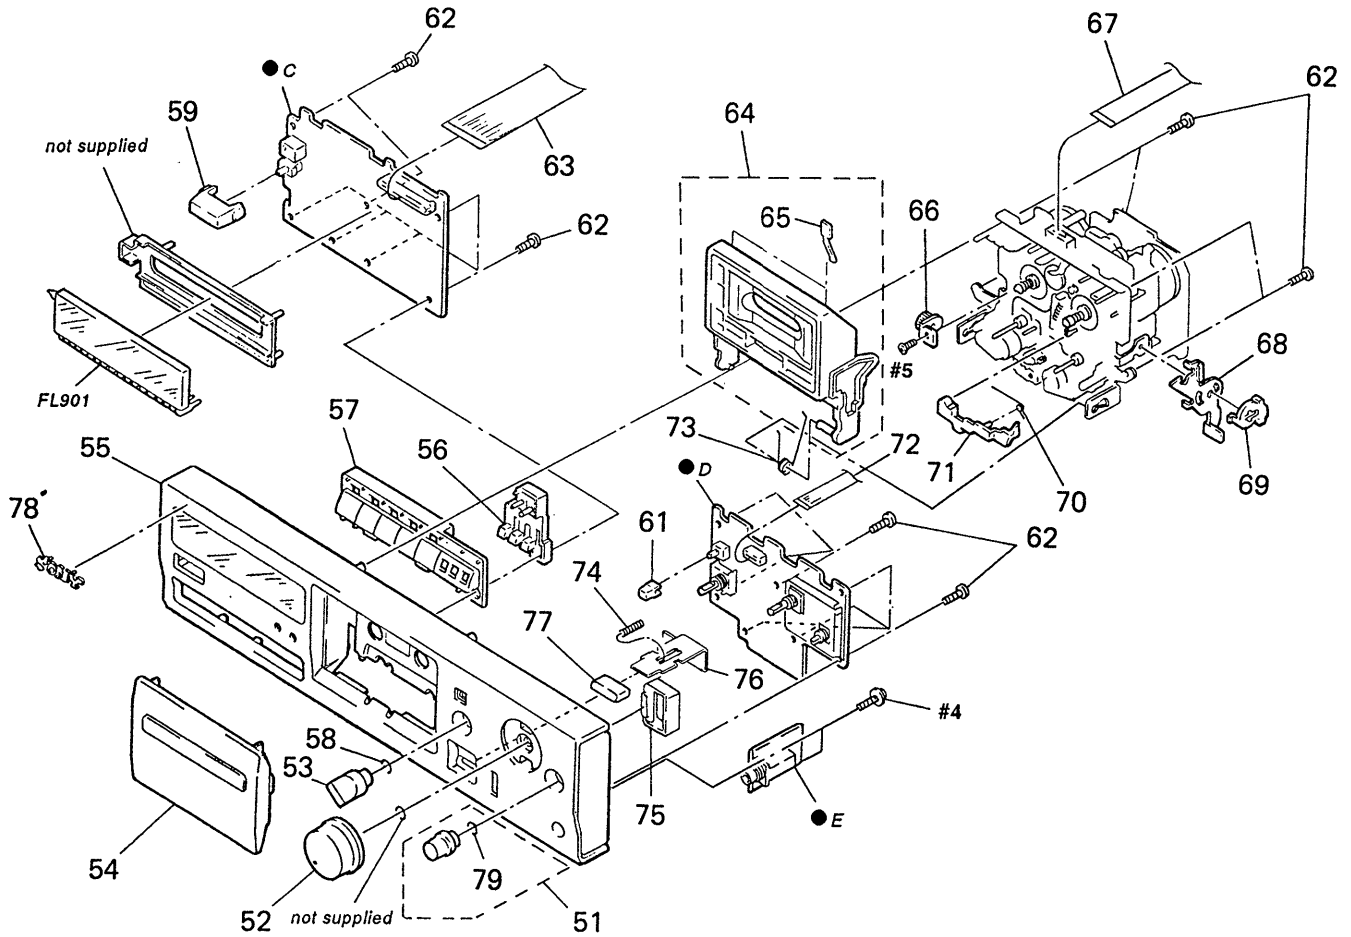

Ref.No.	Part No.	Description	Remark	Ref.No.	Part No.	Description	Remark
51	A-2004-274-A	KNOB (RB) ASSY		66	3-354-963-01	DAMPER	
52	3-367-438-11	KNOB (REC)		67	1-575-781-11	WIRE, FLAT TYPE (9 CORE)	
53	4-908-097-21	KNOB		* 68	3-354-954-01	LEVER (LOCK LEVER R)	
54	X-3366-523-1	LID ASSY, CASSETTE		69	3-354-957-01	JOINT (LOCK LEVER)	
55	X-3366-524-1	PANEL ASSY, FRONT		70	3-354-962-01	SPRING (EJ SAFTY SPRING R)	
56	3-386-248-01	BUTTON (RE)		71	3-354-956-01	LEVER (EJ SAFTY LEVER R)	
57	3-386-247-01	BUTTON (FW)		72	1-751-099-11	WIRE (FLAT TYPE) (13 CORE)	
58	3-350-440-01	SPRING		73	3-354-960-01	SPRING (LOADING R), TORSION	
59	3-354-932-01	BUTTON (POWER)		74	3-359-906-01	SPRING, COMPRESSION	
61	3-380-952-01	BUTTON		75	3-387-834-11	BUTTON (MBC)	
62	4-951-620-01	SCREW (2.6X8), +BVTP		76	3-387-833-01	SLIDER (EJECT)	
63	1-751-100-11	WIRE (FLAT TYPE) (33 CORE)		77	3-387-830-01	BUTTON (EJECT)	
64	X-3340-195-1	HOLDER (R) ASSY, CASSETTE		78	4-925-334-11	EMBLEM (5-A), SONY	
65	3-308-823-11	SPRING		79	3-354-981-01	SPRING (SUS), RING	


6-3. MECHANISM SECTION 1
(TCM-190VB12CS)

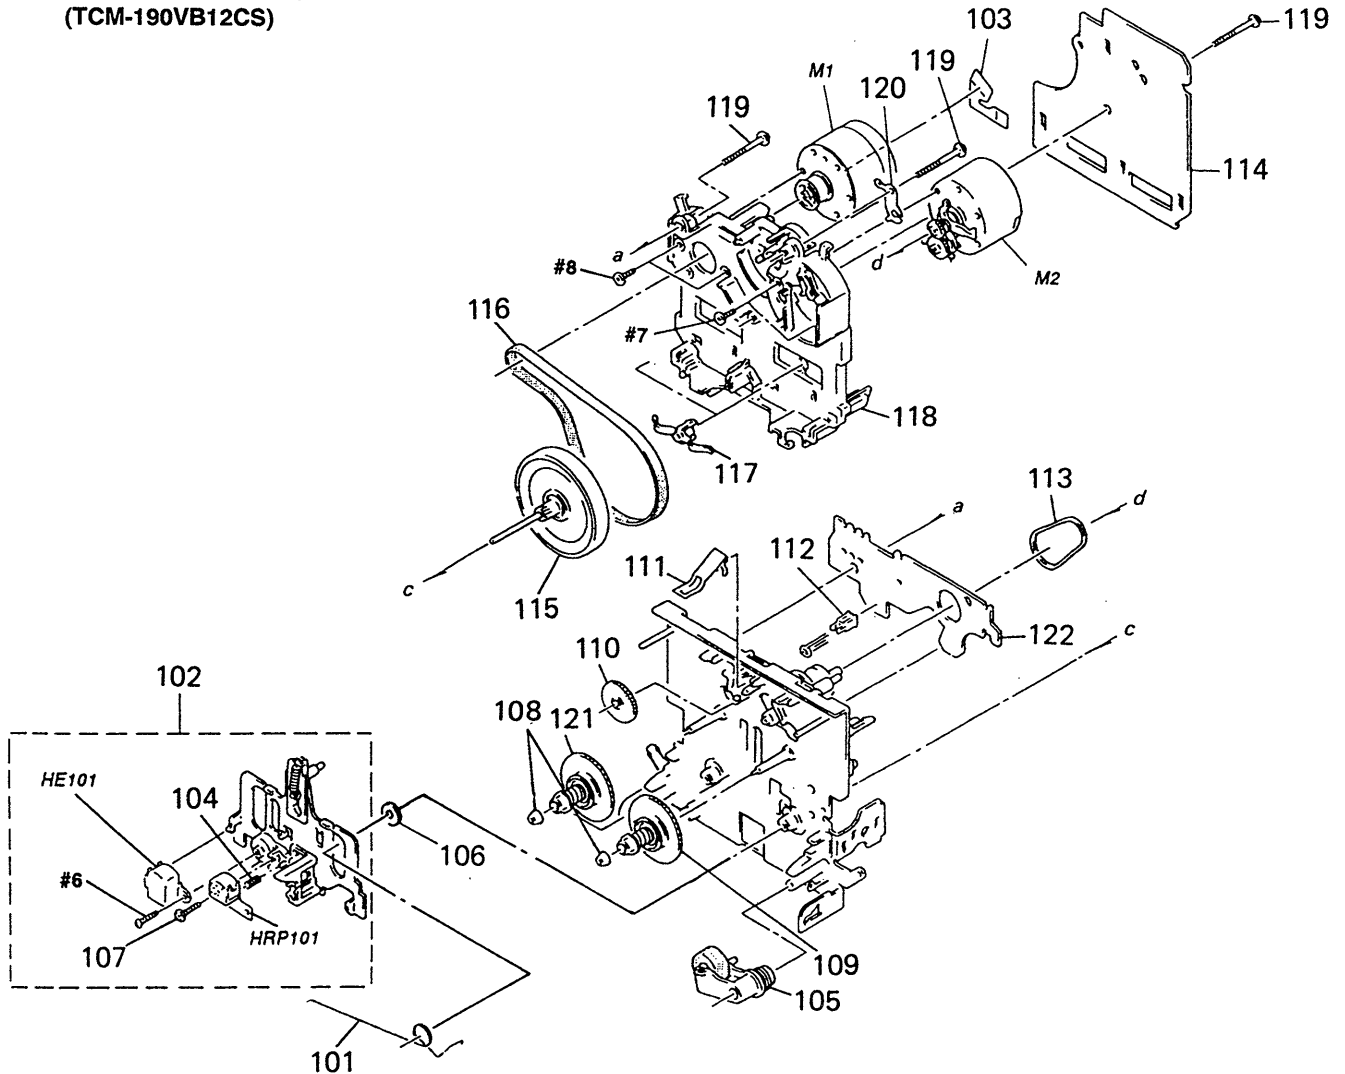

Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	3-359-455-01	SPRING, TORSION		* 114	A-2006-756-A	AUDIO BOARD, COMPLETE	
102	A-2004-093-A	BASE (ONE) ASSY, HEAD		115	X-3359-406-1	FLYWHEEL (FWD) ASSY	
103	1-638-983-11	PC BOARD, MOTOR FLEXIBLE		116	3-359-467-01	BELT (1 WAY FLAT BELT)	
104	3-343-484-01	SPRING, COMPRESSION		117	3-575-321-00	RETAINER, THRUST, CAPSTAN	
105	X-3359-408-1	LEVER (PINCH LEVER FWD) ASSY		* 118	3-359-436-01	BASE (THRUST RETAINER), FITTING	
106	3-356-713-01	WASHER		119	3-359-414-01	SCREW (+PTPW 2X23)	
107	3-359-446-01	SCREW (AZIMUTH ADJUSTMENT)		120	3-359-450-01	PLATE, GROUND	
108	3-362-308-01	CAP (REEL)		121	X-3362-078-1	TABLE ASSY (B), REEL	
109	X-3359-404-1	TABLE ASSY, REEL		* 122	1-634-841-14	SW-A BOARD	
110	3-359-424-01	GEAR (REV GEAR)		Δ HE101	1-543-673-11	HEAD, MAGNETIC (ERASE)	
111	3-359-430-01	SPRING (CASSETTE RETAINER), LEAF		* HRP101	1-543-919-11	HEAD, MAGNETIC (RECORD/PLAYBACK)	
112	3-343-419-01	HOLDER (S SENSER A)		M1	X-3365-377-1	MOTOR ASSY, CAPSTAN	
113	3-359-466-01	BELT (FR), SQUARE		M2	X-3363-501-1	MOTOR ASSY, REEL	

6-4. MECHANISM SECTION 2
(TCM-190VB12CS)

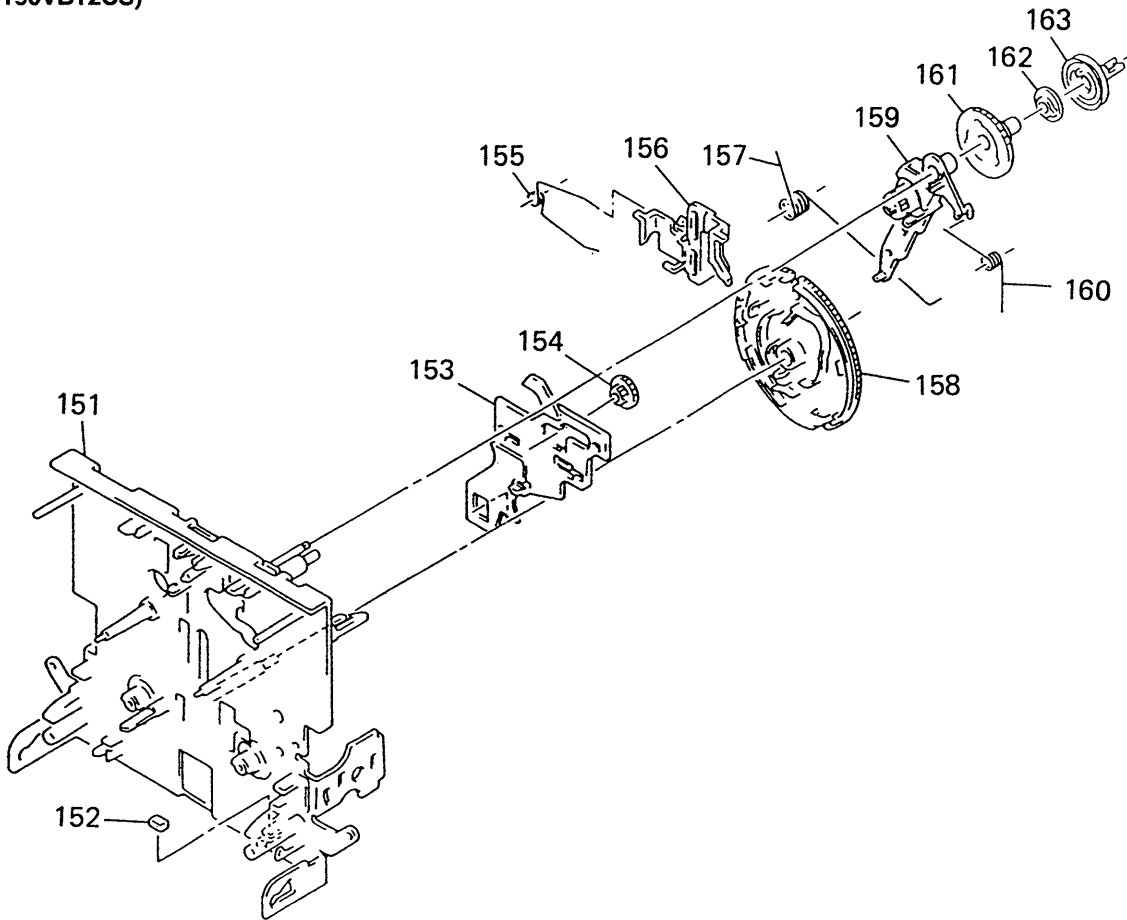

Ref. No.	Part No.	Description	Remark
151	X-3359-416-1	CHASSIS(ONE) ASSY, MECHANICAL	
152	3-359-469-01	SPACER	
* 153	3-359-415-01	SLIDER (TRIGGER SLIDER)	
154	3-359-448-01	GEAR (TRIGGER)	
155	3-359-454-01	SPRING, TORSION	
156	3-359-429-01	SLIDER (BRAKE PLATE)	
157	3-359-456-01	SPRING(TRIGGER SPRING), TORSION	

Ref. No.	Part No.	Description	Remark
158	3-359-420-01	GEAR (CAM GEAR)	
159	X-3359-405-1	LEVER (FR ARM) ASSY	
160	3-359-453-01	SPRING (FR ARM), TORSION	
161	3-359-419-01	GEAR (FR GEAR)	
162	3-359-421-01	CLUTCH (REEL DISK)	
163	3-359-418-01	PULLEY (FR PULLEY)	

SECTION 7 ELECTRICAL PARTS LIST

AUDIO

NOTE :

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms
METAL : Metal-film resistor
METAL OXIDE : Metal oxide-film resistor
F : nonflammable

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u : μ , for example :
uA.... : μ A...., uPA.... : μ PA....
uPB.... : μ PB...., uPC.... : μ PC....
uPD.... : μ PD....
- CAPACITORS
uF : μ F
- COILS
uH : μ H

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
*	A-2006-756-A	AUDIO BOARD, COMPLETE *****		C92	1-136-157-00	FILM 0.022uF	5% 50V
		< CAPACITOR >		C93	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C11	1-163-133-00	CERAMIC CHIP 470PF	5% 50V	C94	1-136-439-11	FILM 330PF	5% 630V
C12	1-136-157-00	FILM 0.022uF	5% 50V	C95	1-136-433-11	FILM 100PF	5% 630V
C13	1-124-234-00	ELECT 22uF	20% 16V	C96	1-163-143-00	CERAMIC CHIP 0.0012uF	5% 50V
C18	1-163-117-00	CERAMIC CHIP 100PF	5% 50V	C97	1-136-273-91	FILM 75PF	5% 630V
C21	1-163-133-00	CERAMIC CHIP 470PF	5% 50V	C98	1-163-003-11	CERAMIC CHIP 330PF	10% 50V
				C99	1-164-005-11	CERAMIC CHIP 0.47uF	25V
C22	1-136-157-00	FILM 0.022uF	5% 50V			< CONNECTOR >	
C23	1-124-234-00	ELECT 22uF	20% 16V	* CNP31	1-580-782-11	CONNECTOR, BOARD TO BOARD	
C28	1-163-117-00	CERAMIC CHIP 100PF	5% 50V	* CNP32	1-580-781-11	PIN, CONNECTOR (PC BOARD) 7P	
C31	1-124-234-00	ELECT 22uF	20% 16V	* CNP33	1-580-782-11	CONNECTOR, BOARD TO BOARD	
C32	1-124-234-00	ELECT 22uF	20% 16V	* CNP71	1-564-719-11	PIN, CONNECTOR (SMALL TYPE) 3P	
C33	1-124-234-00	ELECT 22uF	20% 16V	* CNP72	1-580-411-11	SOCKET, CONNECTOR 4P	
C51	1-164-182-11	CERAMIC CHIP 0.0033uF	10% 50V			< DIODE >	
C52	1-164-182-11	CERAMIC CHIP 0.0033uF	10% 50V	D31	8-719-016-74	DIODE 1SS352	
C53	1-163-020-00	CERAMIC CHIP 0.0082uF	10% 50V			< IC >	
C54	1-136-601-11	FILM 0.01uF	5% 630V	IC31	8-759-106-02	IC uPC4570G2	
C56	1-164-505-11	CERAMIC CHIP 2.2uF	16V	IC81	8-759-106-56	IC uPC1297CA	
C57	1-164-346-11	CERAMIC CHIP 1uF	16V			< COIL >	
C71	1-164-346-11	CERAMIC CHIP 1uF	16V	L81	1-410-780-11	INDUCTOR 27mH	
C80	1-124-234-00	ELECT 22uF	20% 16V	L91	1-410-780-11	INDUCTOR 27mH	
C81	1-164-232-11	CERAMIC CHIP 0.01uF	50V			< TRANSISTOR >	
C82	1-136-157-00	FILM 0.022uF	5% 50V	Q51	8-729-808-01	TRANSISTOR 2SD1622-S	
C83	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V	Q52	8-729-808-01	TRANSISTOR 2SD1622-S	
C84	1-136-439-11	FILM 330PF	5% 630V	Q53	8-729-808-01	TRANSISTOR 2SD1622-S	
C85	1-136-433-11	FILM 100PF	5% 630V	Q71	8-729-216-22	TRANSISTOR 2SA1162	
C86	1-163-143-00	CERAMIC CHIP 0.0012uF	5% 50V				
C87	1-136-273-91	FILM 75PF	5% 630V				
C88	1-163-003-11	CERAMIC CHIP 330PF	10% 50V				
C89	1-124-234-00	ELECT 22uF	20% 16V				
C90	1-107-045-00	MICA 3.9PF	500V				
C91	1-164-232-11	CERAMIC CHIP 0.01uF	50V				

AUDIO SW-A SYSTEM CONTROL

Ref. No.	Part No.	Description	Remark
< RESISTOR >			
R11	1-216-107-00	METAL CHIP 270K 5%	1/10W
R12	1-216-025-00	METAL CHIP 100 5%	1/10W
R13	1-216-100-00	METAL GLAZE 130K 5%	1/10W
R14	1-216-067-00	METAL CHIP 5.6K 5%	1/10W
R21	1-216-107-00	METAL CHIP 270K 5%	1/10W
R22	1-216-025-00	METAL CHIP 100 5%	1/10W
R23	1-216-100-00	METAL GLAZE 130K 5%	1/10W
R24	1-216-067-00	METAL CHIP 5.6K 5%	1/10W
R31	1-216-033-00	METAL CHIP 220 5%	1/10W
R32	1-216-033-00	METAL CHIP 220 5%	1/10W
R51	1-216-091-00	METAL CHIP 56K 5%	1/10W
R52	1-216-091-00	METAL CHIP 56K 5%	1/10W
R53	1-216-073-00	METAL CHIP 10K 5%	1/10W
R54	1-216-309-00	METAL CHIP 5.6 5%	1/10W
R55	1-216-309-00	METAL CHIP 5.6 5%	1/10W
R57	1-216-298-00	METAL CHIP 2.2 5%	1/10W
R71	1-216-082-00	METAL GLAZE 24K 5%	1/10W
R72	1-216-081-00	METAL CHIP 22K 5%	1/10W
R73	1-216-089-00	METAL CHIP 47K 5%	1/10W
R74	1-216-089-00	METAL CHIP 47K 5%	1/10W
R81	1-216-073-00	METAL CHIP 10K 5%	1/10W
R82	1-216-085-00	METAL CHIP 33K 5%	1/10W
R83	1-216-001-00	METAL CHIP 10 5%	1/10W
R84	1-216-101-00	METAL CHIP 150K 5%	1/10W
R85	1-216-075-00	METAL CHIP 12K 5%	1/10W
R91	1-216-073-00	METAL CHIP 10K 5%	1/10W
R92	1-216-085-00	METAL CHIP 33K 5%	1/10W
R93	1-216-001-00	METAL CHIP 10 5%	1/10W
R94	1-216-101-00	METAL CHIP 150K 5%	1/10W
R95	1-216-075-00	METAL CHIP 12K 5%	1/10W
< VARIABLE RESISTOR >			
RV11	1-241-627-11	RES, ADJ, CARBON 1K (PB LEVEL L)	
RV12	1-241-627-11	RES, ADJ, CARBON 1K (PB LEVEL R)	
RV71	1-241-630-11	RES, ADJ, CARBON 10K (TAPE SPEED)	
RV81	1-241-122-11	RES, ADJ, CARBON 22K (REC BIAS L)	
RV91	1-241-122-11	RES, ADJ, CARBON 22K (REC BIAS R)	
< RELAY >			
RY31	1-515-913-11	RELAY	
< TRANSFORMER >			
T51	1-433-383-11	TRANSFORMER, BIAS OSCILLATION	
T81	1-433-398-11	TRANSFORMER, BIAS OSCILLATOR	
T91	1-433-398-11	TRANSFORMER, BIAS OSCILLATOR	

Ref. No.	Part No.	Description	Remark
< TEST PIN >			
* TP81	1-568-449-11	HOUSING, CONNECTOR(PC BOARD)3P	

*	1-634-841-14	SW-A BOARD	

	3-343-419-01	HOLDER (S SENSER A)	
< CONNECTOR >			
* CNP81	1-568-852-11	SOCKET, CONNECTOR 9P	
< IC >			
IC81	8-719-710-03	DIODE NJL5165K-B	
< RESISTOR >			
R81	1-249-414-11	CARBON 560 5%	1/4W
R83	1-247-834-11	CARBON 1.3K 5%	1/4W
R84	1-249-417-11	CARBON 1K 5%	1/4W
R85	1-249-408-11	CARBON 180 5%	1/4W
< SWITCH >			
S81	1-571-958-11	SWITCH, PUSH (1 KEY)(STOP)	
S82	1-571-281-21	SWITCH, LEAF (CRO2)	
S83	1-571-281-21	SWITCH, LEAF (METAL)	
S84	1-571-281-21	SWITCH, LEAF (REC)	
S86	1-571-281-21	SWITCH, LEAF (HALF)	

*	A-2007-011-A	SYSTEM CONTROL BOARD, COMPLETE	

(AEP, Germany)			
*	A-2007-054-A	SYSTEM CONTROL BOARD, COMPLETE (UK, AUS)	

*	1-690-880-21	LEAD (WITH CONNECTOR)	
< CAPACITOR >			
C101	1-136-157-00	FILM 0.022uF 5%	50V
C102	1-124-907-11	ELECT 10uF 20%	50V
C103	1-161-375-00	CERAMIC 0.0022uF 20%	50V
C104	1-124-907-11	ELECT 10uF 20%	50V
C105	1-130-475-00	MYLAR 0.0022uF 5%	50V
C106	1-130-475-00	MYLAR 0.0022uF 5%	50V
C107	1-136-174-00	FILM 0.56uF 5%	50V
C108	1-136-171-00	FILM 0.33uF 5%	50V
C109	1-124-907-11	ELECT. 10uF 20%	50V

SYSTEM CONTROL

Ref. No.	Part No.	Description		Remark
C110	1-124-907-11	ELECT	10uF	20% 50V
C111	1-123-382-00	ELECT	3.3uF	20% 100V
C112	1-124-902-00	ELECT	0.47uF	20% 50V
C113	1-124-903-11	ELECT	1uF	20% 50V
C13i	1-124-927-11	ELECT	4.7uF	20% 100V
C132	1-124-925-11	ELECT	2.2uF	20% 100V
C201	1-136-157-00	FILM	0.022uF	5% 50V
C202	1-124-907-11	ELECT	10uF	20% 50V
C203	1-161-375-00	CERAMIC	0.0022uF	20% 50V
C204	1-124-907-11	ELECT	10uF	20% 50V
C205	1-130-475-00	MYLAR	0.0022uF	5% 50V
C206	1-130-475-00	MYLAR	0.0022uF	5% 50V
C207	1-136-174-00	FILM	0.56uF	5% 50V
C208	1-136-171-00	FILM	0.33uF	5% 50V
C209	1-124-907-11	ELECT	10uF	20% 50V
C210	1-124-907-11	ELECT	10uF	20% 50V
C211	1-123-382-00	ELECT	3.3uF	20% 100V
C212	1-124-902-00	ELECT	0.47uF	20% 50V
C213	1-124-903-11	ELECT	1uF	20% 50V
C231	1-124-927-11	ELECT	4.7uF	20% 100V
C232	1-124-925-11	ELECT	2.2uF	20% 100V
C501	1-124-360-00	ELECT	1000uF	20% 16V
C502	1-124-907-11	ELECT	10uF	20% 50V
C503	1-124-907-11	ELECT	10uF	20% 50V
C504	1-124-903-11	ELECT	1uF	20% 50V
C511	1-136-161-00	FILM	0.047uF	5% 50V
C512	1-136-164-00	FILM	0.082uF	5% 50V
C513	1-130-477-00	MYLAR	0.0033uF	5% 50V
C521	1-124-907-11	ELECT	10uF	20% 50V
C551	1-162-282-31	CERAMIC	100PF	10% 50V
C552	1-161-494-00	CERAMIC	0.022uF	25V
C553	1-162-217-31	CERAMIC	56PF	5% 50V
C554	1-124-925-11	ELECT	2.2uF	20% 100V
C555	1-124-925-11	ELECT	2.2uF	20% 100V
C571	1-124-916-11	ELECT	22uF	20% 63V
C572	1-126-916-11	ELECT	1000uF	20% 6.3V
C581	1-164-159-11	CERAMIC	0.1uF	50V
C601	1-164-159-11	CERAMIC	0.1uF	50V
C602	1-162-288-31	CERAMIC	330PF	10% 50V
C701	1-124-563-11	ELECT	2200uF	20% 25V
C702	1-124-563-11	ELECT	2200uF	20% 25V
C703	1-124-477-11	ELECT	47uF	20% 25V
C704	1-124-473-11	ELECT	1000uF	20% 10V
C705	1-124-473-11	ELECT	1000uF	20% 10V
C706	1-124-472-11	ELECT	470uF	20% 10V
C707	1-124-907-11	ELECT	10uF	20% 50V
C708	1-124-927-11	ELECT	4.7uF	20% 100V
C709	1-124-122-11	ELECT	100uF	20% 50V
C710	1-124-910-11	ELECT	47uF	20% 50V

Ref. No.	Part No.	Description		Remark
C711	1-164-159-11	CERAMIC	0.1uF	50V
C712	1-136-169-00	FILM	0.22uF	5% 50V
C713	1-136-169-00	FILM	0.22uF	5% 50V
C801	1-124-927-11	ELECT	4.7uF	20% 100V
C803	1-164-159-11	CERAMIC	0.1uF	50V
C804	1-164-159-11	CERAMIC	0.1uF	50V
C805	1-164-159-11	CERAMIC	0.1uF	50V
C806	1-124-907-11	ELECT	10uF	20% 50V
C807	1-124-472-11	ELECT	470uF	20% 10V
C808	1-164-159-11	CERAMIC	0.1uF	50V
C809	1-164-159-11	CERAMIC	0.1uF	50V
C810	1-162-282-31	CERAMIC	100PF	10% 50V
C811	1-164-159-11	CERAMIC	0.1uF	50V
C812	1-164-159-11	CERAMIC	0.1uF	50V
C921	1-124-903-11	ELECT	1uF	20% 50V
< CONNECTOR >				
* CN501	1-691-916-11	CONNECTOR, BOARD TO BOARD		
* CN502	1-691-916-11	CONNECTOR, BOARD TO BOARD		
CN503	1-750-414-11	CONNECTOR, FFC/FPC 9P		
CN504	1-750-418-11	CONNECTOR, FFC/FPC 13P		
CN505	1-750-438-11	CONNECTOR, FFC/FPC 33P		
CN506	1-506-468-11	PIN, CONNECTOR 3P		
* CN701	1-564-510-11	PLUG, CONNECTOR 7P		
< CONNECTOR >				
CNP504	1-750-418-11	CONNECTOR, FFC/FPC 13P		
CNP505	1-750-438-11	CONNECTOR, FFC/FPC 33P		
* CNP702	1-580-230-31	PIN, CONNECTOR (PC BOARD) 2P		
< DIODE >				
D131	8-719-987-63	DIODE	1N4148M	
D132	8-719-987-63	DIODE	1N4148M	
D231	8-719-987-63	DIODE	1N4148M	
D232	8-719-987-63	DIODE	1N4148M	
D511	8-719-987-63	DIODE	1N4148M	
D512	8-719-987-63	DIODE	1N4148M	
D551	8-719-987-63	DIODE	1N4148M	
D571	8-719-200-77	DIODE	10E2N	
D701	8-719-200-77	DIODE	10E2N	
D702	8-719-200-77	DIODE	10E2N	
D703	8-719-200-77	DIODE	10E2N	
D704	8-719-200-77	DIODE	10E2N	
D705	8-719-200-77	DIODE	10E2N	
D706	8-719-200-77	DIODE	10E2N	
D707	8-719-200-77	DIODE	10E2N	
D708	8-719-933-33	DIODE	HZS6A1L	
D709	8-719-933-47	DIODE	HZS7B2L	
D710	8-719-933-41	DIODE	HZS6C3L	

SYSTEM CONTROL

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
D711	8-719-987-63	DIODE	1N4148M	Q503	8-729-900-61	TRANSISTOR	DTA114ES
D712	8-719-987-63	DIODE	1N4148M	Q504	8-729-900-80	TRANSISTOR	DTC114ES
D713	8-719-000-93	DIODE	UZL-7H1	Q511	8-729-620-05	TRANSISTOR	2SC2603-EF
D714	8-719-987-63	DIODE	1N4148M	Q512	8-729-900-80	TRANSISTOR	DTC114ES
D715	8-719-933-36	DIODE	HZS6B1L	Q521	8-729-900-80	TRANSISTOR	DTC114ES
D801	8-719-933-33	DIODE	HZS6A1L	Q531	8-729-900-61	TRANSISTOR	DTA114ES
D802	8-719-933-33	DIODE	HZS6A1L	Q532	8-729-900-80	TRANSISTOR	DTC114ES
< INDICATOR TUBE >				Q551	8-729-119-76	TRANSISTOR	2SA1175-HFE
FL901	1-517-173-11	INDICATOR TUBE, FLUORESCENT		Q571	8-729-900-61	TRANSISTOR	DTA114ES
< IC >				Q572	8-729-900-61	TRANSISTOR	DTA114ES
IC501	8-752-059-55	IC	CXA1331S	Q573	8-729-900-65	TRANSISTOR	DTA144ES
IC502	8-752-055-62	IC	CXA1579P	Q601	8-729-801-93	TRANSISTOR	2SD1387
IC503	8-759-634-51	IC	M5218AP	Q701	8-729-141-83	TRANSISTOR	2SB1094-LK
IC504	8-759-634-51	IC	M5218AP	Q702	8-729-209-15	TRANSISTOR	2SD2012
IC505	8-759-634-51	IC	M5218AP	Q703	8-729-900-74	TRANSISTOR	DTC143TS
IC506	8-759-140-53	IC	uPD4053BC	Q704	8-729-209-15	TRANSISTOR	2SD2012
IC507	8-759-634-51	IC	M5218AP	Q705	8-729-620-05	TRANSISTOR	2SC2603-EF
IC508	8-759-000-48	IC	MC14052BCP	Q706	8-729-900-74	TRANSISTOR	DTC143TS
IC509	8-759-916-14	IC	SN74HC04AN	Q707	8-729-119-76	TRANSISTOR	2SA1175-HFE
IC510	8-759-145-58	IC	uPC4558C	Q708	8-729-140-04	TRANSISTOR	2SB1116A-L
IC601	8-759-803-42	IC	LA6500-FA	Q803	8-729-900-80	TRANSISTOR	DTC114ES
IC701	8-759-145-58	IC	uPC4558C	Q805	8-729-119-76	TRANSISTOR	2SA1175-HFE
IC801	8-752-842-10	IC	CXP82316-014Q	< RESISTOR >			
IC802	8-759-165-82	IC	PST600E-T	R101	1-247-838-00	CARBON	2K 5% 1/4W
IC901	8-741-100-48	IC	SBX1610-59	R102	1-247-842-11	CARBON	3K 5% 1/4W
< JACK >				R103	1-247-887-00	CARBON	220K 5% 1/4W
J501	1-565-258-11	JACK, PIN 4P (LINE IN/OUT)		R104	1-249-417-11	CARBON	1K 5% 1/4W
J502	1-568-519-41	JACK, LARGE TYPE (HEADPHONES)		R105	1-249-423-11	CARBON	3.3K 5% 1/4W
< COIL >				R106	1-247-887-00	CARBON	220K 5% 1/4W
L801	1-410-513-11	INDUCTOR	22uH	R107	1-249-428-11	CARBON	8.2K 5% 1/4W
< FILTER >				R108	1-247-864-11	CARBON	24K 5% 1/4W
LPF101	1-231-388-00	FILTER, LOW PASS		R109	1-249-414-11	CARBON	560 5% 1/4W
LPF201	1-231-388-00	FILTER, LOW PASS		R110	1-249-429-11	CARBON	10K 5% 1/4W
< TRANSISTOR >				R111	1-249-423-11	CARBON	3.3K 5% 1/4W
Q101	8-729-900-89	TRANSISTOR	DTC144ES	R121	1-249-437-11	CARBON	47K 5% 1/4W
Q102	8-729-900-80	TRANSISTOR	DTC114ES	R122	1-249-421-11	CARBON	2.2K 5% 1/4W
Q121	8-729-142-25	TRANSISTOR	2SD1020-HFE	R123	1-249-421-11	CARBON	2.2K 5% 1/4W
Q122	8-729-620-05	TRANSISTOR	2SC2603-EF	R124	1-249-437-11	CARBON	47K 5% 1/4W
Q201	8-729-900-89	TRANSISTOR	DTC144ES	R125	1-249-425-11	CARBON	4.7K 5% 1/4W
Q202	8-729-900-80	TRANSISTOR	DTC114ES	R131	1-249-425-11	CARBON	4.7K 5% 1/4W
Q221	8-729-142-25	TRANSISTOR	2SD1020-HFE	R132	1-247-822-11	CARBON	430 5% 1/4W
Q222	8-729-620-05	TRANSISTOR	2SC2603-EF	R133	1-247-866-11	CARBON	30K 5% 1/4W
				R134	1-247-866-11	CARBON	30K 5% 1/4W
				R135	1-249-439-11	CARBON	68K 5% 1/4W
				R136	1-249-410-11	CARBON	270 5% 1/4W
				R141	1-249-432-11	CARBON	18K 5% 1/4W
				R142	1-249-432-11	CARBON	18K 5% 1/4W
				R143	1-249-421-11	CARBON	2.2K 5% 1/4W

SYSTEM CONTROL

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R144	1-247-854-11	CARBON	9. 1K	5%	1/4W	R522	1-249-426-11	CARBON	5. 6K	5%	1/4W
R145	1-249-409-11	CARBON	220	5%	1/4W	R523	1-247-858-11	CARBON	13K	5%	1/4W
R151	1-249-433-11	CARBON	22K	5%	1/4W	R524	1-247-852-11	CARBON	7. 5K	5%	1/4W
R152	1-249-417-11	CARBON	1K	5%	1/4W	R525	1-247-854-11	CARBON	9. 1K	5%	1/4W
R161	1-249-429-11	CARBON	10K	5%	1/4W	R526	1-247-854-11	CARBON	9. 1K	5%	1/4W
R201	1-247-838-00	CARBON	2K	5%	1/4W	R527	1-249-426-11	CARBON	5. 6K	5%	1/4W
R202	1-247-842-11	CARBON	3K	5%	1/4W	R528	1-249-422-11	CARBON	2. 7K	5%	1/4W
R203	1-247-887-00	CARBON	220K	5%	1/4W	R529	1-249-429-11	CARBON	10K	5%	1/4W
R204	1-249-417-11	CARBON	1K	5%	1/4W	R530	1-249-421-11	CARBON	2. 2K	5%	1/4W
R205	1-249-423-11	CARBON	3. 3K	5%	1/4W	R531	1-249-427-11	CARBON	6. 8K	5%	1/4W
R206	1-247-887-00	CARBON	220K	5%	1/4W	R532	1-249-433-11	CARBON	22K	5%	1/4W
R207	1-249-428-11	CARBON	8. 2K	5%	1/4W	R535	1-249-419-11	CARBON	1. 5K	5%	1/4W
R208	1-247-864-11	CARBON	24K	5%	1/4W	R536	1-249-421-11	CARBON	2. 2K	5%	1/4W
R209	1-249-414-11	CARBON	560	5%	1/4W	R537	1-247-866-11	CARBON	30K	5%	1/4W
R210	1-249-429-11	CARBON	10K	5%	1/4W	R538	1-247-852-11	CARBON	7. 5K	5%	1/4W
R211	1-249-423-11	CARBON	3. 3K	5%	1/4W	R539	1-249-431-11	CARBON	15K	5%	1/4W
R221	1-249-437-11	CARBON	47K	5%	1/4W	R540	1-247-874-11	CARBON	62K	5%	1/4W
R222	1-249-421-11	CARBON	2. 2K	5%	1/4W	R541	1-249-429-11	CARBON	10K	5%	1/4W
R223	1-249-421-11	CARBON	2. 2K	5%	1/4W	R542	1-249-429-11	CARBON	10K	5%	1/4W
R224	1-249-437-11	CARBON	47K	5%	1/4W	R543	1-249-429-11	CARBON	10K	5%	1/4W
R225	1-249-425-11	CARBON	4. 7K	5%	1/4W	R544	1-249-429-11	CARBON	10K	5%	1/4W
R231	1-249-425-11	CARBON	4. 7K	5%	1/4W	R553	1-249-437-11	CARBON	47K	5%	1/4W
R232	1-247-822-11	CARBON	430	5%	1/4W	R555	1-249-427-11	CARBON	6. 8K	5%	1/4W
R233	1-247-866-11	CARBON	30K	5%	1/4W	R556	1-249-423-11	CARBON	3. 3K	5%	1/4W
R234	1-247-866-11	CARBON	30K	5%	1/4W	R557	1-249-441-11	CARBON	100K	5%	1/4W
R235	1-249-439-11	CARBON	68K	5%	1/4W	R558	1-249-429-11	CARBON	10K	5%	1/4W
R236	1-249-410-11	CARBON	270	5%	1/4W	R559	1-249-441-11	CARBON	100K	5%	1/4W
R241	1-249-432-11	CARBON	18K	5%	1/4W	R560	1-249-417-11	CARBON	1K	5%	1/4W
R242	1-249-432-11	CARBON	18K	5%	1/4W	R561	1-249-432-11	CARBON	18K	5%	1/4W
R243	1-249-421-11	CARBON	2. 2K	5%	1/4W	R562	1-249-436-11	CARBON	39K	5%	1/4W
R244	1-247-854-11	CARBON	9. 1K	5%	1/4W	R571	1-249-403-11	CARBON	68	5%	1/4W
R245	1-249-409-11	CARBON	220	5%	1/4W	R572	1-249-429-11	CARBON	10K	5%	1/4W
R251	1-249-433-11	CARBON	22K	5%	1/4W	R573	1-249-429-11	CARBON	10K	5%	1/4W
R252	1-249-417-11	CARBON	1K	5%	1/4W	R574	1-249-435-11	CARBON	33K	5%	1/4W
R261	1-249-429-11	CARBON	10K	5%	1/4W	R601	1-249-421-11	CARBON	2. 2K	5%	1/4W
R501	1-249-417-11	CARBON	1K	5%	1/4W	R602	1-249-429-11	CARBON	10K	5%	1/4W
R502	1-215-455-00	METAL	27K	1%	1/6W	R603	1-249-405-11	CARBON	100	5%	1/4W
R503	1-249-422-11	CARBON	2. 7K	5%	1/4W	R604	1-249-433-11	CARBON	22K	5%	1/4W
R504	1-215-455-00	METAL	27K	1%	1/6W	R605	1-249-433-11	CARBON	22K	5%	1/4W
R505	1-249-417-11	CARBON	1K	5%	1/4W	R606	1-249-430-11	CARBON	12K	5%	1/4W
R511	1-249-429-11	CARBON	10K	5%	1/4W	R607	1-249-433-11	CARBON	22K	5%	1/4W
R512	1-249-421-11	CARBON	2. 2K	5%	1/4W	R608	1-247-862-11	CARBON	20K	5%	1/4W
R513	1-249-441-11	CARBON	100K	5%	1/4W	R609	1-249-429-11	CARBON	10K	5%	1/4W
R514	1-249-441-11	CARBON	100K	5%	1/4W	R701	1-249-425-11	CARBON	4. 7K	5%	1/4W
R515	1-249-436-11	CARBON	39K	5%	1/4W	R702	1-249-420-11	CARBON	1. 8K	5%	1/4W
R516	1-249-425-11	CARBON	4. 7K	5%	1/4W	R703	1-249-426-11	CARBON	5. 6K	5%	1/4W
R517	1-249-433-11	CARBON	22K	5%	1/4W	R704	1-249-427-11	CARBON	6. 8K	5%	1/4W
R518	1-249-425-11	CARBON	4. 7K	5%	1/4W	R705	1-249-419-11	CARBON	1. 5K	5%	1/4W
R521	1-249-426-11	CARBON	5. 6K	5%	1/4W	R706	1-249-419-11	CARBON	1. 5K	5%	1/4W

SYSTEM CONTROL

Ref. No.	Part No.	Description	Remark		
R707	1-249-429-11	CARBON	10K	5%	1/4W
R708	1-249-425-11	CARBON	4.7K	5%	1/4W
R709	1-249-409-11	CARBON	220	5%	1/4W
R710	1-249-417-11	CARBON	1K	5%	1/4W
R711	1-249-427-11	CARBON	6.8K	5%	1/4W
R712	1-249-427-11	CARBON	6.8K	5%	1/4W
R713	1-249-421-11	CARBON	2.2K	5%	1/4W
R714	1-249-421-11	CARBON	2.2K	5%	1/4W
R715	1-247-838-00	CARBON	2K	5%	1/4W
R716	1-249-441-11	CARBON	100K	5%	1/4W
R717	1-249-433-11	CARBON	22K	5%	1/4W
R718	1-247-870-11	CARBON	43K	5%	1/4W
R719	1-249-431-11	CARBON	15K	5%	1/4W
△R720	1-219-137-11	FUSIBLE	0.33	10%	1/4W F
R801	1-249-417-11	CARBON	1K	5%	1/4W
R802	1-249-441-11	CARBON	100K	5%	1/4W
R805	1-249-434-11	CARBON	27K	5%	1/4W
R806	1-249-434-11	CARBON	27K	5%	1/4W
R807	1-249-434-11	CARBON	27K	5%	1/4W
R808	1-249-434-11	CARBON	27K	5%	1/4W
R809	1-249-434-11	CARBON	27K	5%	1/4W
R810	1-249-405-11	CARBON	100	5%	1/4W
R811	1-249-405-11	CARBON	100	5%	1/4W
R812	1-249-405-11	CARBON	100	5%	1/4W
R813	1-249-405-11	CARBON	100	5%	1/4W
R814	1-249-405-11	CARBON	100	5%	1/4W
R815	1-249-405-11	CARBON	100	5%	1/4W
R816	1-249-405-11	CARBON	100	5%	1/4W
R817	1-249-435-11	CARBON	33K	5%	1/4W
R818	1-249-435-11	CARBON	33K	5%	1/4W
R819	1-249-435-11	CARBON	33K	5%	1/4W
R820	1-249-405-11	CARBON	100	5%	1/4W
R821	1-249-435-11	CARBON	33K	5%	1/4W
R822	1-249-429-11	CARBON	10K	5%	1/4W
R823	1-249-435-11	CARBON	33K	5%	1/4W
R824	1-249-421-11	CARBON	2.2K	5%	1/4W
R825	1-249-435-11	CARBON	33K	5%	1/4W
R826	1-249-421-11	CARBON	2.2K	5%	1/4W
R827	1-249-422-11	CARBON	2.7K	5%	1/4W
R828	1-249-422-11	CARBON	2.7K	5%	1/4W
R829	1-249-422-11	CARBON	2.7K	5%	1/4W
R830	1-249-435-11	CARBON	33K	5%	1/4W
R901	1-249-420-11	CARBON	1.8K	5%	1/4W
R902	1-249-423-11	CARBON	3.3K	5%	1/4W
R903	1-249-426-11	CARBON	5.6K	5%	1/4W
R904	1-249-429-11	CARBON	10K	5%	1/4W
R905	1-249-435-11	CARBON	33K	5%	1/4W
R906	1-249-420-11	CARBON	1.8K	5%	1/4W
R907	1-249-423-11	CARBON	3.3K	5%	1/4W

Ref. No.	Part No.	Description	Remark		
R908	1-249-426-11	CARBON	5.6K	5%	1/4W
R909	1-249-429-11	CARBON	10K	5%	1/4W
R910	1-249-435-11	CARBON	33K	5%	1/4W
R911	1-249-429-11	CARBON	10K	5%	1/4W
R912	1-249-429-11	CARBON	10K	5%	1/4W
R913	1-249-429-11	CARBON	10K	5%	1/4W
R914	1-249-441-11	CARBON	100K	5%	1/4W
R921	1-247-850-11	CARBON	6.2K	5%	1/4W
R922	1-247-862-11	CARBON	20K	5%	1/4W
R923	1-249-428-11	CARBON	8.2K	5%	1/4W
R924	1-249-425-11	CARBON	4.7K	5%	1/4W
R925	1-249-437-11	CARBON	47K	5%	1/4W
< VARIABLE RESISTOR >					
RV111	1-238-600-11	RES, ADJ, CARBON 10K (REC GAIN L)			
RV211	1-238-600-11	RES, ADJ, CARBON 10K (REC GAIN R)			
RV901	1-241-820-11	RES, VAR, CARBON 50K/50K (REC LEVEL)			
RV902	1-241-897-11	RES, VAR, CARBON 50K/50K (REC BALANCE)			
< SWITCH >					
S901	1-554-303-21	SWITCH, TACTILE (/PAUSE)			
S902	1-554-303-21	SWITCH, TACTILE ()			
S905	1-554-303-21	SWITCH, TACTILE (/REC MUTE)			
S906	1-554-303-21	SWITCH, TACTILE (RESET)			
S907	1-554-303-21	SWITCH, TACTILE (MEMORY)			
S908	1-554-303-21	SWITCH, TACTILE ()			
S909	1-554-303-21	SWITCH, TACTILE ()			
S910	1-554-303-21	SWITCH, TACTILE ()			
S911	1-554-303-21	SWITCH, TACTILE (/REC)			
S913	1-692-409-11	SWITCH, PUSH (1 KEY) (POWER)			
S921	1-554-303-21	SWITCH, TACTILE (AUTO CAL)			
S922	1-692-408-11	SWITCH, ROTARY (DOLBY NR)			
S923	1-554-118-00	SWITCH, PUSH (1 KEY) (MPX FILTER)			
< TEST PIN >					
* TP801	1-564-505-11	PLUG, CONNECTOR 2P			
< CRYSTAL >					
X801	1-579-175-11	VIBRATOR, CERAMIC			

MISCELLANEOUS					

1	1-751-099-11	WIRE (FLAT TYPE) (13 CORE)			
2	1-575-781-11	WIRE, FLAT TYPE (9 CORE)			
3	1-751-100-11	WIRE (FLAT TYPE) (33 CORE)			
△8	1-575-651-21	CORD, POWER (AEP, Germany)			
△8	1-696-586-11	CORD, POWER (UK)			

The components identified by mark or dotted line with mark are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remark
----------	----------	-------------	--------

△8	1-696-845-11	CORD, POWER (AUS)	
63	1-751-100-11	WIRE (FLAT TYPE) (33 CORE)	
67	1-575-781-11	WIRE, FLAT TYPE (9 CORE)	
72	1-751-099-11	WIRE (FLAT TYPE) (13 CORE)	
103	1-638-983-11	PC BOARD, MOTOR FLEXIBLE	
△HE101	1-543-673-11	HEAD, MAGNETIC (ERASE)	
* HRP101	1-543-919-11	HEAD, MAGNETIC(RECORD/PLAYBACK)	
M1	X-3365-377-1	MOTOR ASSY, CAPSTAN	
M2	X-3363-501-1	MOTOR ASSY, REEL	
△T701	1-423-634-11	TRANSFORMER, POWER	

ACCESSORIES & PACKING MATERIALS

	1-558-271-11	CORD, CONNECTION	
	1-558-271-11	CORD, CONNECTION	
	1-696-170-11	CORD, CONNECTION	
*	3-350-830-01	CUSHION	
*	3-388-323-71	INDIVIDUAL CARTON	
	3-756-690-11	MANUAL, INSTRUCTION (AEP, UK, AUS) (ENGLISH/FRENCH/SPANISH/PORTUGUESE)	
	3-756-690-41	MANUAL, INSTRUCTION (AEP) (GERMAN/DUTCH/SWEDISH/ITALIAN)	
	3-756-690-51	MANUAL, INSTRUCTION (GERMAN) (Germany)	
	3-756-690-61	MANUAL, INSTRUCTION (CHINESE) (AEP)	

HARDWARE LIST

#1	7-682-548-09	SCREW +BVT 3X8 (S)
#2	7-682-547-09	SCREW +BVT 3X6 (S)
#3	7-621-849-00	SCREW (BV/RING)
#4	7-685-134-19	SCREW (+ PTPWH) (2. 6X8)
#5	7-621-773-95	SCREW +BVT 2. 6X6 (S)
#6	7-621-772-58	SCREW (+B2X10)
#7	7-627-556-08	SCREW +P 2. 6X2. 8
#8	7-621-775-00	SCREW +B 2. 6X3

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.